Patient Monitor

Operator Manual

Old Style VSM Service Manual 95P360E

For a service manual covering the older VSMs, click on the "Old Style Service Manual 95P360E" button above.

Welch Allyn

Service Manual

This manual covers the Enhanced Vital Signs Monitor introduced in June 1999. The Enchanced VSM is easily detected by a dark blue "Silence" button on the front panel instead of a grey button.

Vital Signs Monitor

PN 95P445E
Copyright 1999

SERVICE MANUAL

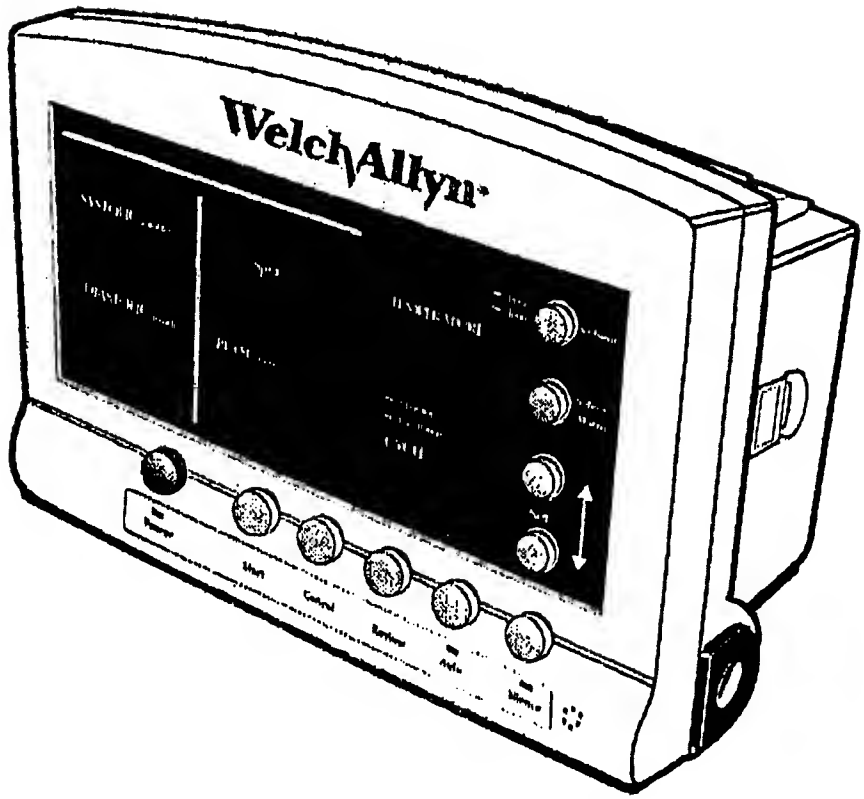

Welch Allyn

Vital Signs Monitor

Copyright 1999
Welch Allyn Inc.

4341 State Street Road
Skaneateles Falls, NY 13153-0220

Service Manual pn95P445E
Rev. 1, 6/99

*Note: All drawings enclosed are for reference only. Consult the system or the factory for all current drawings.

Revision History

Revision	Sections	Date	Author	Description
1.00	All	6/10/99	JDB	Introduction of manual.

Table Of Contents

		Sub-Section:	Page:
SECTION 1:	**General Information**		
	To Service Personnel	1.1	1
	Limited Warranty/Warranty Assistance	1.2	3-4
	Basic System Description	1.3	5
	Basic System Operation Index	1.4	7-15
	Basic System Operation	1.4	8-15
	Specifications	1.5	17-21
	Block Diagram of Unit Operation	1.5	16-17
	Specifications	1.6	19-21
	Serial numbering system defined	1.7	23
	Firmware Identification	1.8	25
SECTION 2:	**Service Set Up**		
	Service Manual Intent & Scope	2.1	1
	Test Equipment Bench Layout	Fig 2.2.1	3-4
	Required Tools/Equipment List	2.2.2	5
	Replacement Parts List	2.3	7-9
	Maintenance/Service Support	2.4	11
SECTION 3:	**Problem Diagnosis**		
	Overview	3.1	1
	Diagnostic Process/Returned units	3.2	3-5
	When and how to calibrate	3.3	7-8
	Loading Unit Software	3.4	9
	Welch Allyn Monitor Self Diagnostic Fault Codes	3.5	11-12
	“Complaint/Cause/Corrective Action”	3.6	13-17
	Trouble Shooting Guide	3.6	19-23
SECTION 4:	**Major Component Removal/Replacement** (IN ORDER OF REMOVAL ACCESS)		
	Front Housing	4.1	1-2
	Main Printed Circuit Board (PCB)	4.2	3-4
	DC TO DC Converter (SpO_2 units)	4.3	5-6
	Pressure Transducer on Main PCB	4.4	7-8
	Display PCB	4.5	9-10
	Key Pad (front housing)	4.6	11-12
	Temperature PCB	4.7	13-14
	Specific Oxygen Board (Nonin)	4.8	15-17
	Specific Oxygen Board (Nellcor)	4.9	19-20
	Pump	4.10	21-22
	Valve (Pneutronics)	4.11	23-24
	Printer/Printer PCB/keypad	4.12	25-26
	Battery	4.13	27-28

SECTION 5:	Test Procedures	Sub-Section:	Page:
	Calibration test	5.1	1-2
	Current tests	5.2	3
	Noise test	5.3	5
	Button Test	5.4	7
	Print quality	5.5	9
	Pneumatic test	5.6	11-12
	Hardware Fail-safe Tests	5.7	13
	SpO_2 option testing	5.8	15
	Temperature option testing	5.9	17
	Nurse Call Testing	5.10	19
	Check List for CBPM Service Work	5.11	21-22
SECTION 6:	**Drawings, Schematics, Board Layouts, Bill of Materials**		
SECTION 7:	**Repair Test Specifications**		
	Specifications	7.1	1-7

CAUTION: PRIOR TO DOING REPAIR WORK, USE GROUNDING MAT AND ANTI-STATIC WRIST STRAP TO MINIMIZE RISK OF DAMAGE TO SENSITIVE ELECTRONIC COMPONENTS.

SECTION 1:

General Information

1.1 To Service Personnel:

Read and understand the Welch Allyn Vital Signs Monitor Operator Manual and this Service Manual. The information contained in both of these publications is subject to change without notice and should not be construed as a commitment by Welch Allyn, Inc.

Welch Allyn assumes no responsibility for any errors that may appear in this manual. If the product and/or its operation varies significantly from any description herein, please contact the WELCH ALLYN TECHNICAL SERVICE DEPARTMENT:
1-800-450-9275
(828) 684-4895
Fax (828)687-9323

Welch Allyn, Inc.
95 Old Shoals Road
Arden, North Carolina 28704

This product has been designed to provide a high degree of safety and reliability. However, we can not guarantee against: deterioration of components due to aging, normal wear, tampering, and abuse.

All service and repairs must be performed by authorized Welch Allyn personnel or agents, using approved Welch Allyn replacement parts and approved process materials. Failure to do so will invalidate the product warranty. Please refer to the product warranty for specific coverage.

Welch Allyn, Inc.
95 Old Shoals Road
Arden, North Carolina 28704
USA
1 800 450-9275

1.2 Limited Warranty

Welch Allyn warrants the Welch Allyn Vital Signs Monitor, when new, to be free of defects in material and workmanship and to perform in accordance with manufacturer's specifications for a period of two years from the date of purchase from Welch Allyn or its authorized distributors or agents. Welch Allyn will either repair or replace any components found to be defective or at variance from manufacturer's specifications within this time at no cost to the customer. It shall be the purchaser's responsibility to return the instrument to Welch Allyn or an authorized distributor, agent or service representative. This warranty does not include breakage or failure due to tampering, misuse, neglect, accidents, modification or shipping. This warranty is also void if the instrument is not used in accordance with manufacturer's recommendations or if repaired by other than Welch Allyn or an authorized agent. Purchase date determines warranty requirements. No other express warranty is given.

To receive service assistance or to ask questions regarding this warranty, please call or write:

Welch Allyn Technical Services Dept.
95 Old Shoals Road
Arden, North Carolina 28704 USA
1 (800) 450-9275 or (828) 684-4895
Fax: (828) 687-9323

Service Policy

All repairs on products under warranty must be performed or approved by a Welch Allyn Service Center. *Unauthorized repairs will void the warranty*. Products out of warranty should be repaired by qualified electronics personnel or a Welch Allyn Service Center.

Technical Assistance

If you have an equipment problem that you cannot resolve, call the Welch Allyn Service Center nearest you for assistance. Technical service support is available to you by telephone on normal business days, from 8:30AM until 4:30PM Eastern Standard Time at the phone numbers listed on the next page.

Before returning a product for repair you must obtain authorization from Welch Allyn. An RGA (Return Goods Authorization) number will be given to you by our service personnel. Be sure to note this number on the outside of your shipping box. Returns without an RGA number will not be accepted for delivery.

Welch Allyn Service Centers

For Service or Repair

USA Customers
Welch Allyn, Inc.
Technical Service Centers
95 Old Shoals Road
Arden, NC 28704-9739 USA
Phone: 828-684-4895
Fax: 828-687-9323

CANADA Customers
Welch Allyn Canada Limited
Technical Service Centers
160 Matheson Blvd., East
Mississauga, Ontario L4Z1V4 CANADA
Ph: 905-890-0004 or 1 800-561-8797
Fax: 905-890-0008

INTERNATIONAL Customers

Welch Allyn GmbH
Technical Service Center
Zollerstrasse 2-4 Road
D-72417 Jungingen
GERMANY
Phone: [49]-7477-9271-73
Fax: [49]-7477-9271-93

Welch Allyn Australia Pty. Ltd.
Technical Service Center
Ground Floor, 18-20 Orian Road
Lane Cove NSW 2066
AUSTRALIA
Phone: [61]-29-4183-155
Fax: [61]-29-4183-650

Welch Allyn Ltd.
21-09 Golden Mile to 6001
Beach Road
Singapore 199589
REPUBLIC OF SINGAPORE
Phone: [65]-291-0882
Fax: [65]-291-5780

Welch Allyn UK Ltd.
Cublington Road
Aston Abbotts
Buckinghamshire HP22 4ND
UNITED KINGDOM
Phone: [44] 129-668-2140
Fax: [44] 129-668-2104

LATIN AMERICA Customers

MDI International
Technical Service Centers
7324 SW 48th Street
Miami, FL 33155 USA
Phone: 305-669-9591
Fax: 305-669-1971

1.3 Basic System Description

Introduction

The Welch Allyn Vital Signs Monitor is designed to non-invasively and automatically measure systolic and diastolic pressure, pulse rate, temperature and oxygen saturation (SpO_2) for adult and pediatric patients. All pressure, pulse, temperature and SpO_2 values are displayed on large, easy-to-read displays, and may be printed via an integrated thermal printer, as desired.

The rechargeable battery and wide variety of mounting accessories make the Clinical Monitor convenient for many locations. The operator may choose any combination of simultaneous measurement modalities. This flexibility, combined with features such as programmable alarms and automatic BP cycles, makes the Clinical Monitor ideal for a wide variety of patient monitoring needs.

Refer to the Operator Manual PART NUMBER 5200-85 (SPECIFY LANGUAGE) Section 1 for complete information on Indications For Use, Special Features, Supplies and Accessories

1.4 Basic System Operation

INDEX

1.4.1 Blood Pressure Operating Modes
- a. Max/Min Blood Pressure and Pulse Ranges
- b. Blood Pressure Manual Mode
- c. Blood Pressure Auto Mode

1.4.2 Temperature Operating Modes
- a. Max/Min Temperature Ranges
- b. Temperature Normal Mode
- c. Temperature Monitor Mode

1.4.3 SpO_2 Operating Mode
- a. Max/Min SpO_2 Ranges
- b. SpO_2 Monitor Mode

1.4.4 Pulse Rate Feature
Max/Min Pulse Rate Ranges

1.4.5 Nurse Call Interface Wiring Diagram

1.4.1 Blood Pressure Operating Modes

When a blood pressure measurement cycle is initiated, the cuff will automatically be inflated to the operator selected pressure level.

The cuff will immediately begin to deflate in a stepped fashion and will determine systolic pressure and diastolic pressure from the pulses sensed by the cuff at various pressure levels. This is the oscillometric method of non-invasive blood pressure monitoring.

Blood pressure measurements may be initiated manually, or automatically at time intervals determined by the user.

At the completion of a measurement cycle the systolic and diastolic pressures are displayed. If the Monitor is in Automatic Mode, the measured values are kept on display until the next BP measurement is initiated. When not in Automatic Mode, the measured values are displayed for two minutes, after which time the display screen is blanked. The most recent BP measurement may be recalled by pressing the REVIEW button.

When in Automatic Mode, if the unit is unable to determine the systolic or diastolic value, the measurement will be automatically repeated once.

1.4.1.a. Max/Min Blood Pressure Ranges

The maximum and minimum ranges of blood pressure are detailed below:

Measurement	Maximum	Minimum
Systolic Pressure	250 mmHg	60 mmHg
Diastolic Pressure	160 mmHg	30 mmHg

1.4.1.b. Blood Pressure Manual Mode

In the Manual Mode, a single blood pressure determination is made only when the START button is pushed. The manual mode is the default mode of operation for blood pressure determinations.

A measurement cycle may be canceled at any time by pressing the CANCEL button. This action immediately initiates a rapid cuff deflation.

The blood pressure measurement data will appear on the display immediately following the measurement. The display will blank after two minutes. If the display is blanked, pressing the REVIEW button on the front panel will recall the measurement. Up to 99 prior measurements are available for review or printing.

In Blood Pressure Manual Mode, the following alarm limits may be activated; SYSTOLIC HIGH LIMIT, SYSTOLIC LOW LIMIT, DIASTOLIC HIGH LIMIT, DIASTOLIC LOW LIMIT, PULSE RATE HIGH LIMIT and PULSE RATE LOW LIMIT. Blood pressure determinations which activate alarms are indicated by flashing displays and a repetitive audible tone. If an alarm limit is violated, subsequent blood pressure determinations may be made only after the alarm condition is reset by pressing any button on the Monitor's display.

1.4.1.c. Blood Pressure Automatic Mode

The Automatic Blood Pressure Mode is entered by pressing the AUTO button. Pressing the AUTO button displays a choice of 10 cycle interval times as follows: "st" (STAT mode), 1 min, 3 min, 4 min, 5 min, 10 min, 15 min, 30 min, 45 min, 60 min and 90 min. These choices represent the time interval from the beginning of one cycle to the beginning of the next automatic cycle. STAT mode allows the monitor to take continuous blood pressure measurements for 15 minutes. In addition, the operator may choose to disable the Auto Mode by choosing "—" (two dashes).

A measurement cycle may be canceled at any time by pressing the CANCEL button. This action immediately initiates a rapid cuff deflation.

The blood pressure measurement data will appear on the display immediately following the measurement and will remain displayed until the next measurement cycle is initiated.

1.4.1.c. Blood Pressure Automatic Mode continued

In Blood Pressure Auto Mode, the following alarm limits may be activated; SYSTOLIC HIGH LIMIT, SYSTOLIC LOW LIMIT, DIASTOLIC HIGH LIMIT, DIASTOLIC LOW LIMIT, PULSE RATE HIGH LIMIT and PULSE RATE LOW LIMIT. Blood pressure determinations which activate alarms are indicated by flashing displays and a repetitive audible tone. Any alarm limit violation must be reset to continue automatically timed blood pressure determinations. The alarm may be reset by pressing any button on the monitor's display.

1.4.2. Temperature Operating Modes

Thermistor Thermometry measurements are made with the Welch Allyn SureTemp4TM thermometer. Oral, axillary and rectal probes utilize single-use disposable probe covers which limit cross-contamination. Oral, axillary or rectal temperatures are taken using 'Normal' or 'Monitor' operating modes.

In the normal mode the thermometer's microprocessor "predicts" body temperature in about 4 seconds for oral temperatures, in about 10 seconds for axillary and in about 15 seconds for rectal temperatures. The monitor mode displays the patient's actual temperature after 3 minutes and will continue to display an updated temperature as long as the probe remains in place.

Temperature readings may be displayed in Fahrenheit or Celsius scales.

1.4.2.a. Max/Min Temperature Ranges

Measurement	Maximum	Minimum
Temperature, ˚F	108˚F	84˚F
Temperature, ˚C	42.2˚C	28.9˚C

1.4.2.b. Temperature Normal Mode

In Normal Mode, the device will measure temperature at discrete intervals and then calculate the rate of change according to a known algorithm. This allows the thermometer to predict the end point that the thermistor would reach if it were left in the mouth until it reached mouth temperature. This predictive feature allows the thermometer to arrive at an accurate oral temperature reading in approximately 4 seconds, an accurate axillary temperature reading in approximately 10 seconds and an accurate rectal temperature reading in approximately 15 seconds.

Normal mode is the default operating mode for temperature determinations.

Operator selectable patient alarm limits are not available in Temperature Normal Mode. However, temperatures which are outside of the operating range of the device will be noted on the temperature display.

1.4.2.c. Temperature Monitor Mode

Continuous Monitor Mode operation is normally used for longer term monitoring and when difficult situations prevent accurate temperatures from being taken in the normal mode. The probe must be in contact with tissue for at least three (3) minutes for accurate temperature measurement. Monitor mode temperatures may not be identical to predicted 'Normal' temperatures because of ambient temperature influence and other factors. The trend in temperature is the important standard to be observed when in the 'Monitor' mode.

Operator selectable patient alarm limits are not available in Temperature Normal Mode. However, temperatures which are outside of the operating range of the device will be noted on the temperature display.

1.4.3 SpO Operating Mode

The Welch Allyn Vital Signs Monitor incorporates either the Nonin® pulse oximetry system or the Nellcor® pulse oximetry system which determines arterial oxyhemoglobin saturation (% SpO_2) by measuring the absorption of red and infrared light passed through the tissues. Changes in absorption caused by pulsation of blood in the vascular bed are used to determine arterial saturation and pulse rate.

Oxygen saturation percent is calculated with each pulse detected, and thus the monitor display is continually updated. The pulse signal bar graph is an indicator of the strength and quality of the detected pulses.

When SpO_2 is measured, the patient's pulse rate is also measured and displayed. A pulse rate measurement from the SpO_2 determination overrides a pulse rate measurement derived from a blood pressure measurement.

In SpO_2 monitoring mode operator selectable alarm limits for low SpO_2 % may be activated. A condition which violates the SpO_2 low limit alarm is indicated by a flashing display and repetitive audible tone. Should a patient alarm condition for ≤ or pulse rate occur, the Monitor will indicate an alarm condition (flashing & beeping) while continuing to monitor and display the patient's current SpO_2%. The alarm will automatically reset when the patient's condition returns to within the preset alarm parameters.

Should a patient alarm condition for SpO_2 or pulse rate occur, the operator may invoke "Silence Mode" by pressing the SILENCE button. This will silence the audible tone (display will continue to flash), while the practitioner attends to the patient and the monitor. Silence mode resets automatically after 30 seconds, or when the patient's condition returns to within the preset alarm parameters.

Removal of the SpO_2 sensor from the patient will initiate an alarm. To reset the sensor alarm, press any button on the monitor's display.

SpO_2 is generally measured via pulses detected using a finger sensor. However, for certain situations SpO_2 may be measured at alternate sites including the earlobe, forehead and toes. Special sensors must be employed in these situations.

1.4.3.a. Max/Min SpO Ranges

The SpO_2 sensor is designed to detect oxygen saturation as follows.

	Maximum	Minimum
SpO_2	99%	40%

1.4.3.b. SpO Monitor Mode

The SpO_2 monitor performs most accurately with the finger clip sensor, which may be used on all fingers except the thumb. The finger clip sensor is recommended for spot checks or short term (<30 minutes) continuous monitoring.

The device determines arterial oxyhemoglobin saturation (SpO_2 %) by measuring the absorption of red and infrared light passed through the tissue. Oxygen saturation and pulse rate are displayed on the LED digital display. On each detected pulse, the pulse signal bar graph flashes. The intensity of this signal is a simple visual indicator of waveform signal strength, and can identify situations where the pulsatile nature of the tissue may not be adequate for an accurate SpO_2 reading. The update interval of the bar graph should correspond to the patient's pulse rate. This is an indication of the quality of the SpO_2 signal.

All Welch Allyn Vital Signs Monitors with pulse oximetry capability are equipped with a pulse tone. This audible tone beeps in synchronization with each beat of the patient's heart. In addition, the frequency of the tone will vary based on the patient's oxygen saturation value. The higher the tone's frequency, the higher the patient's oxygen saturation value. The user may change the pulse tone volume, or turn this feature off as necessary.

1.4.4 Pulse Rate Feature

The Welch Allyn Vital Signs Monitor is capable of determining pulse rate as an adjunct to the blood pressure measurement and the SpO_2 measurement.

The pulse rate, in beats per minute, will be determined primarily from the SpO_2 measurement methodology. In the case where SpO_2 is not available, or is disabled, the pulse rate display will be driven from data collected as part of the blood pressure measurement method.

There are two operator selectable alarm limits for the pulse rate. They are PULSE RATE HIGH LIMIT and PULSE RATE LOW LIMIT. Pulse rates which activate alarm limits are indicated by a flashing display and a repetitive audible tone.

Should a pulse rate alarm occur when the pulse rate measurement is derived from the blood pressure measurement, no subsequent blood pressure or pulse rate measurements may be made until the alarm is reset. The alarm may be reset by pressing any button on the monitor's display.

Should a pulse rate alarm occur when the pulse rate measurement is derived from the SpO_2 measurement, the monitor will indicate an alarm condition (flashing & beeping) while continuing to monitor and display the patient's current SpO_2% and pulse rate. The alarm will automatically reset when the patient's condition returns to within the preset alarm parameters.

Should a patient alarm condition for pulse rate occur during SpO_2 monitoring, the operator may invoke "Silence Mode" by pressing the SILENCE button. This will silence the audible tone (display will continue to flash), while the practitioner attends to the patient and Monitor. Silence mode resets automatically after 30 seconds, or when the patient's condition returns to within the preset alarm parameters.

1.4.4.a. Max/Min Pulse Rate Ranges

The maximum and minimum pulse rate ranges are as follows:

	Maximum	**Minimum**
Pulse Rate	200 bpm	40 bpm

1.4.5 Nurse Call Interface Wiring Diagram

Note: See Section IV.19.A of the Operator's manual for complete information on the Nurse Call interface.

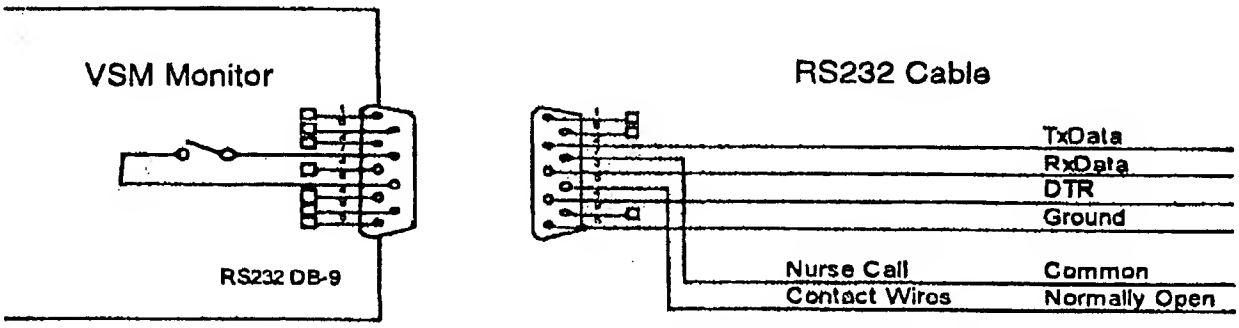

Nurse Call Contacts:
30VDC @ 1Amp or
240VAC @ 1Amp

The Welch Allyn Vital Signs Monitor provides a switch closure output between two pins of the serial connector (pins 7 and 8). The output is "universal" in that it is compatible with a wide variety of different systems with no polarity dependence. The Nurse Call output is ohmically isolated from all circuitry. The output is rated for 1 Amp at 240 VAC or 30VDC. During an alarm condition the output is closed. Otherwise the output is open. During a power off or power failure condition the output is open.

1.5 Specifications

Index:

1.5.1 Performance Specifications

1.5.2 Technical Specifications
- a. Mechanical Specifications
- b. Electrical Specifications
- c. Environmental Specifications

1.5.3 Printer Specifications

1.5.1 Performance Specifications

The performance specifications of the Clinical Vital Signs Monitor are as follows:

CUFF PRESSURE RANGE
0 mmHg - 300 mmHg

INITIAL CUFF INFLATION
120 mmHg, 140 mmHg, 160 mmHg, 180mmHg, 200 mmHg, 240 mmHg or 280 mmHg depending on pressure preset level. Default cuff inflation is 160mmHg.

SYSTOLIC DETERMINATION
Maximum: 250 mmHg
Minimum: 60 mmHg

DIASTOLIC DETERMINATION
Maximum: 160 mmHg
Minimum: 30 mmHg

BLOOD PRESSURE ACCURACY
Blood pressure accuracy meets or exceeds SP10-1992 AAMI standards for non-invasive blood pressure accuracy (AAMI standard: ± 5 mmHg mean error; 8 mmHg standard deviation). Blood pressure accuracy is validated for pressure measurement using the upper arm only, with the patient in the sitting position. Blood pressure is validated against manual auscultatory readings.

BLOOD PRESSURE DETERMINATION TIME
20 seconds to 45 seconds typical, 165 seconds maximum.

PULSE RATE DETERMINATION
Maximum: 200 bpm
Minimum: 40 bpm

PULSE RATE ACCURACY

SpO_2 Module Heart Rate (Nonin®)	±3.0%
SpO_2 Module Heart Rate (Nellcor®)	±3 bpm
Blood Pressure Algorithm Heart Rate	±5.0%

OVERPRESSURE CUTOFF
295 mmHg to 330 mmHg

TEMPERATURE DETERMINATION

Normal and Monitor Modes:	Maximum	108.0F (42.2C)
	Minimum	84.0F (28.9C)

TEMPERATURE ACCURACY
Temperature accuracy meets ASTM E112-86: "Standard Specification for Electronic Thermometer for Intermittent Determination of Patient Temperature."

TEMPERATURE DETERMINATION TIME
Normal Mode: ORAL: 4 seconds typical, 15 seconds maximum
Monitor Mode: ORAL: 3 minutes.

OXYGEN SATURATION RANGE (SpO_2%)
40-99% oxygen saturation

SpO_2 ACCURACY
Nonin® Pulse Oximeter Module Saturation (%SpO_2 ±1 Standard Deviation) 70-99% ±2 digits <70% unspecified

Nellcor® Pulse Oximeter Module Saturation (%SpO_2 ±1 Standard Deviation) 70-99% ±3 digits <70% unspecified

BATTERY CHARGING
To at least 90% capacity in 12 hours. Unit will operate and charge battery simultaneously when connected to power source.

1.5.2 Technical Specifications:

1.5.2.a Mechanical Specifications

Dimensions

Height	6.5 inches	(16.5cm)
Length	8.6 inches	(21.8cm)
Depth	5.0 inches	(12.7cm)

Weight

Approximately 6 pounds (2.8Kg)

Color

Oral/Axillary Temperature Probe - Blue
Rectal Temperature Probe - Red

Mounting

Self-supporting on rubber feet
IV Pole Mountable
Custom Mobile Stand
Wall Mountable
Attaches to Bed Rail

Portability

-May be hand carried when held by the recessed handle.
-When attached to an IV pole, or mounted on its custom mobile stand, the monitor and accessories can be wheeled from patient to patient.
-When attached to the bed rail may be transported with the patient within the hospital environment.

Operator Instructions/Alarm Interpretation

Comprehensive Operator Manual available. Quick reference operator instructions and alarm interpretation are located on side panel labels.

1.5.2.b Electrical Specifications

Power Requirements

Patient-Rated isolation transformer is connected to AC mains:

North American Version	120VAC, 60 Hz, 0.20A Input Source; 8Vdc, 0.75A Output Source
International Versions:	230VAC or 240VAC, 50Hz 0.20A Input Source; 8Vdc, 0.75A Output Source.

Battery

6 v, 4 Ahr / 20 hr Sealed Rechargeable Lead Gel Cell

A fully charged battery will support 200 "typical" blood pressure determinations taken at 3 minute intervals (10 hours). Battery is 90-100% charged after 12 hours of charging. The battery automatically charges when the monitor is powered through the AC power transformer. The battery will charge faster when the instrument is not in operation.

1.5.2.c Environmental Specifications

Operating Temperature

+10C to +40C
+50F to +104F

Exception: Thermometry module will not operate below 60-F (16-C).

Storage Temperature

-20C to +50C
-4F to +122F

Relative Humidity

15 to 90% (non-condensing)

Operating Altitude

-170 m to + 4877 m
-557 ft. to +16,000 ft.

1.5.3 Printer Technical Specifications

Type
Thermal printer, dot matrix

Print speed
46 cps

Paper feed
friction type

Voltage
5 v

Average power when printing
880 mA

Paper width
57 - 58 mm

1.6 Serial Numbering System Defined

The serial plate for the 52000 Series (Welch Allyn Vital Signs Monitor) is located on the bottom of the unit. The serial number consists of eight digits.

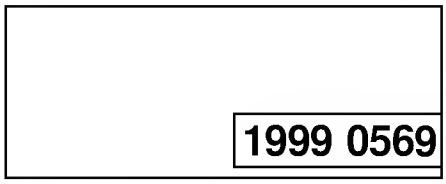

The four digits on the left are the year of manufacture.

The four digits on the right are the sequence of build starting with 0001 annually.

(The example unit was the 569th unit built in 1999).

1.7 Firmware Identification

To confirm these levels, place the unit into the "Configuration" mode. Hold down the ***Start*** button while the unit is being powered up.

Release the button when the main firmware version appears in the Systolic/Diastolic window. The SpO_2 option and Temperature option (if installed) will appear in the Temperature and SpO_2 displays.

Verify the firmware levels by reviewing the Repair Test Specifications document.

SECTION 2:

Service Set Up

2.1 Intent of Manual and Product Scope

This manual provides technical service and recalibration information to technicians authorized to repair and recalibrate Welch Allyn, Inc. products. When used in conjunction with the required test equipment and tools, technicians will be able to diagnose, repair, recalibrate, and test the Welch Allyn Vital Signs Monitor. The manual includes: Recalibration instructions, fault/cause analysis, step by step disassembly and reassembly procedures, repair, adjustment, and re-test procedures.

2.2.1 Test Equipment Bench Layout:

Figure 2.2.1 depicts recommended layout of test equipment and special tools for service and recalibration of the Welch Allyn Vital Signs Monitor.

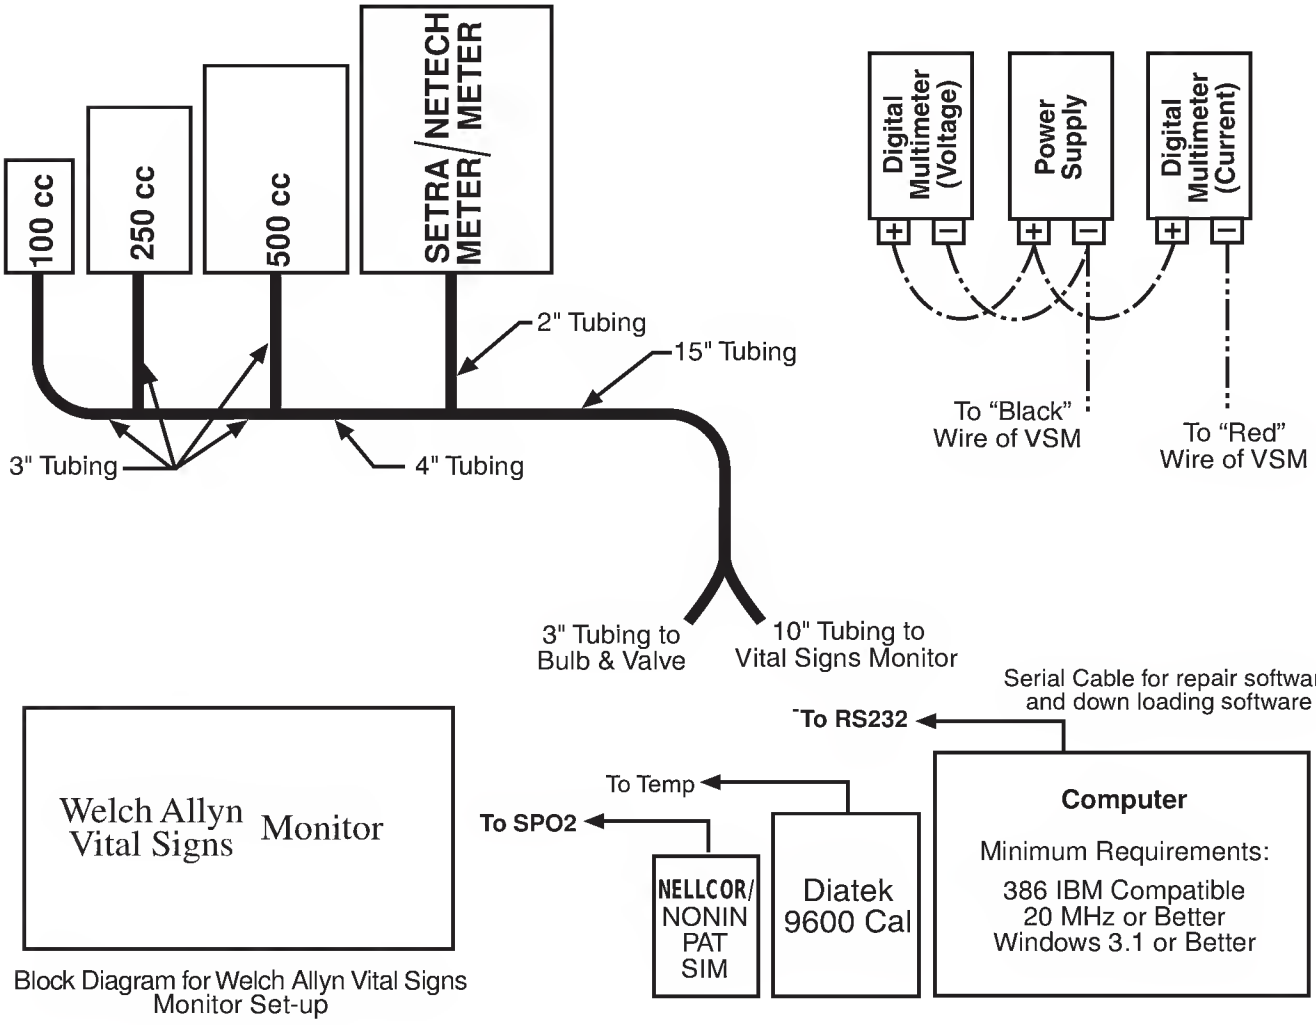

Block Diagram for Welch Allyn Vital Signs Monitor Set-up

FIGURE 2.2.1

BENCH layout for recalibrating and testing Welch Allyn Vital Signs Monitor

Service Notes:

The following commercially available equipment is required for service and calibration of the Welch Allyn Vital Signs Monitor – not available from Welch Allyn.

– IBM compatible 386 20 MHz computer or better. The computer must have Windows 3.1 or higher, DOS 5.1 or higher, a serial port.

– 2 Digital Multi-Meters. These meters must have 4 1/2 digit displays for accuracy.

– Power Supply. 0-20 Vdc adjustable with 0-3A output.

– Oscilloscope. 60 MHz minimum.

2.2.2 Welch Allyn Vital Signs Service Tools

DESCRIPTION	TOOL #	LEAD TIME	COMPANY	OPTION I: Complete Service Set	OPTION II: Partial Service Set
100cc Test Volume	T112819	3 Weeks	Welch Allyn	●	●
250cc Test Volume	T112818	3 Weeks	Welch Allyn	●	●
500cc Test Volume	T112854	3 Weeks	Welch Allyn	●	●
Digital Timer	8456T12	3 Days	McMaster-Carr	●	●
NeTech Meter*	200-2000IN	3 Days	NeTech	▲	▲
– OR –					
Setra Meter* (0-10 PSIG)	2270-01	6-8 Weeks	Setra Systems		
Pliers	T112458	3 Weeks	Biltmore Tool	●	
Bulb And Valve	5088-01	3 Weeks	Welch Allyn	●	●
Keypad Engaging Tool	T112067	3 Weeks	Welch Allyn	●	
ESD Kit	T112469	Stock	Cameron & Barkley	●	
WIRE Cutters	T112486	Stock	Welch Allyn	●	
Tweezers	T112511	Stock	Welch Allyn	●	
Electronic Swabs	318M2	Stock	Welch Allyn	●	
Pneumatic Tubing (Cut)	97P24	Stock	Welch Allyn	●	●
“Y” Fitting	9586TPK4	2 Weeks	Festo	●	●
“T” Fitting (3)	9585TPK4	2 Weeks	Festo	●	●
Test Cable	130S28	3 Weeks	Welch Allyn	●	●
Pneumatic Clamps (3)	21730-001	Stock	VWR Scientific	●	●
Torque Screwdriver	T112917	Stock	Tool And Gauge	●	
Torque Screwdriver	T112918	Stock	Tool And Gauge	●	
Custom Repair Software	130S29E	Stock	Welch Allyn	●	●
#4 Phillips Bit	T112919	Stock	Biltmore Tool	●	
#6 Phillips Bit	T112933	Stock	Biltmore Tool	●	
T8 Torx Bit	T112464A	3 Weeks	Welch Allyn	●	
7/16" Wrench	T112990	Stock	McMaster Carr	●	
Cable Tie Tool	T112845	Stock	Newerk	●	
Nonin Patient Simulator	8000S	Stock	Nonin	●	●
Nonin Phantom Fingers	9440	Stock	Nonin	●	
Nonin Cable	8500-I	Stock	Nonin	●	●
Diatek 9600 Calibrator	01800-110	Stock	Diatek	●	
Diatek Cal. Key	06137-000	3 Weeks	Diatek	●	●
LG. Adult Cuff/Bag	5200-02	Stock	Welch Allyn	●	●
Pneumatic Tubing (Coiled)	5200-07	Stock	Welch Allyn	●	●
Service Manual	5200-86E	Stock	Welch Allyn	●	●
Nellcor Patient Simulator	SRC2	Stock	Nellcor	●	●
Nellcor Test Cable	EC-8	Stock	Nellcor	●	●

* Choose one of these meters for calibration. **DO NOT ORDER BOTH METERS.**

Allowing the bio-medical department to use a water bath to check temperature (measuring against a temperature standard) That standard must be accurate to with +/- 1F.

See Section 1.1 for ordering tools.

2.3 Replacement Parts – Welch Allyn

In addition to individual parts listed below, SPARE PARTS KITS have been made up for your convenience. This assures that you will have all the mounting materials and other small items needed for a repair. The foam pads mounted on the battery are one such example. Kits will not be broken down. FOR AUTHORIZED REPAIR SITES ONLY.

Welch Allyn Replacement Parts:

PART#:	DESCRIPTION:
130S46-E	English Front Housing Kit
130S46-S	Spanish Front Housing Kit
130S46-F	French Front Housing Kit
130S46-G	German Front Housing Kit
130S46-I	Italian Front Housing Kit

Includes: front housing with loose labels. Four different types of labels for the four different configurations i.e.:

BP w/Printer Only,
BP w/Printer + Temp,
BP w/Printer + SpO_2,
BP w/Printer + Temp + SpO_2

130S51	Front Housing Switch Array
130S45*	Main PCB Assembly Includes: hardware
130S4*	Display PCB Assembly Includes: hardware
130S5*	Valve
130S6	Pneumatic Connector Includes: connector, washer, nut, and grommet
130S39*	Pump Assembly Includes: pump, cable tie mount, 2 cable ties, foam pads, instructions, specifications
130S40E	English Rear Housing Kit
130S40F	French Rear Housing Kit
130S40G	German Rear Housing Kit
130S40I	Italian Rear Housing Kit
130S40S	Spanish Rear Housing Kit
130S9	Power Jack
130S10	Back Panel Includes: panel and hardware
130S41	Tubing Assembly Includes: all tubing, “T” fitting, instructions
130S13	Bumpers (2 ea.)
130S14	Battery Access Plate Includes: plate and hardware
130S47	Wire Harness Includes: 14 pin MTA connector, 3 pin MTA connector, faston receptacles for the power supply, power jack, battery, and valve lead wires all assembled
130S16	Temperature Plug
130S17	Printer Assembly Includes: thermal printer, double faced adhesive foam all assembled
130S18*	Printer Housing Includes: housing, switch array, PCB, hardware, flex strip
130S48	RS232 Cable Includes: DB9 connector, hardware, 4 pin MTA, lead wires all assembled

PART#:	DESCRIPTION:
130S42*	SpO_2 PCB (Nonin) Includes: PCB with cable attached, DB9 connector and cable (not attached), and hardware with instructions
130S49	SpO_2 Sensor Interconnect (Nonin) Includes: lead wires and 4 pin MTA connector
130S52*	Temperature PCB Assembly Includes: PCB, hardware, lead wire and connectors
130S53	Temperature Connector Includes: connector, lead wires and hardware
130S24	Temperature Probe Housing Includes: housing and hardware
130S27	Printer Paper Cover
130S28	Cable, DB9 Female to DB9 Female 42" long
130S29E	Software, Repair
130S43	Kit, Repair, Nellcor SpO_2 PCB with connector
130S50	Kit, Repair, SpO_2 Cable (Nellcor)
130S54	Kit, Repair, SpO_2 Cable to Main (Nellcor)
130S37	Upgrade, Software, Version 3.11
41P100**	Check Valve
117S144**	DC to DC Converter
114S588**	Pressure Sensor
66S530**	"Printer, Flat Cable"
5200-01	Cuff Assy, Adult with 1 tube bag
5200-02	Cuff Assy, Lg Adult with 1 tube bag
5200-03	Cuff Assy, Child Print with 1 tube bag
5200-04	Bag, Adult with cut tube
5200-05	Bag, Lg Adult with cut tube
5200-06	Bag, Child with cut tube
5082-59	Cuff, Adult Black
5082-61	Cuff, Lg Adult Black
5082-63	Cuff, Child Print
5200-07	Pressure Hose with new Luer fitting
5200-08	Calibration T connector
5200-20	Probe, Oral 9 Ft, Diatek
5200-22	Probe, Rectal 9 Ft, Diatek
5200-40	Sensor, $SSpO_2$ Finger Clip (3 meter cord) (Nonin)
5200-41	Sensor, SpO_2 Ear Clip (Nonin)
5200-42	Sensor, SpO_2 Flex (Nonin)
5200-44	Sensor, $SSpO_2$ Reflectance (Nonin)
5200-45	Holder, SpO_2 Reflectance Sensor (Nonin)
5200-46	Sensor, SpO_2 Adult Finger Flexi-form (Nonin)
5200-47	Sensor, SpO_2 Ped Finger Flexi-form (Nonin)
5200-50	Tape, SpO_2 Sensor Attachment (Nonin)
5200-51	Tape Strips, Hydrogel for SpO_2 (Nonin)
5200-52	Cable, SpO_2 Extension 3 Ft (Nonin)
5200-53	Kit, SpO_2 Finger Phantom Calibration (Nonin)
5200-54	Sensor, SpO_2 Finger Clip (1 meter cord) (Nonin)
5200-12	Tubing, straight 8 ft. with fitting
5200-56	Pediatric Finger Clip Sensor (Nonin) 9 ft. cable
5200-55	Extension Cord 10 ft. for SpO_2 sensor (Nonin)

PART#:	DESCRIPTION:
5200-60	Mobile Stand Kit
5200-61	Mobile Stand Kit, Modified
5200-62	Wall Mount Kit
5200-63	Wall Mount Kit, Modified
5200-64	IV Pole Kit
5200-65	IV Pole Kit, Modified
5200-66	Bed Rail Kit
5200-67	Bed Rail Kit, Modified
5200-68	Cuff Clip
5200-69	Accessory Pack
7052-25	Printer Paper (5 rolls)
5200-101	Transformer, USA 120V, 60 Hz
5200-102	Transformer, Europe 220V, 50 Hz
5200-103	Transformer, UK 230V, 50 Hz
5200-103	Transformer, Australia 230V, 50 Hz
5200-110	Power Cord, USA/Japan
5200-111	Power Cord, Europe
5200-112	Power Cord, UK
5200-113	Power Cord, Australia
5200-114	Power Cord, Switzerland
5200-115	Power Cord, South America
5200-84	Battery, 6 Volt Lead Acid
D-25	OXISENSOR II adult digit oxygen transducer (Nellcor)
D-25L	OXISENSOR II adult digit oxygen transducer with long cable (Nellcor)
D-20	OXISENSOR II pediatric oxygen transducer (Nellcor)
R-15	OXISENSOR adult nasal oxygen transducer (Nellcor)
I-20	OXISENSOR II infant digit oxygen transducer (Nellcor)
EC-8	Extension Cable – 8 foot (Nellcor)
OXICLIQ-A	Adult oxygen transducer for use only with OXICLIQ sensor cable OC-3 (Nellcor)
OXICLIQ-P	Pediatric oxygen transducer for use only with OXICLIQ SENSOR CABLE MODEL OC-3 (Nellcor)
OXI-A/N	OXIBAND adult/neonatal oxygen transducer (Nellcor)
OXI-P/I	OXIBAND pediatric/infant oxygen transducer (Nellcor)
RS-10	Reflectance oxygen transducer (Nellcor)
D-YS	DURA-Y oxygen transducer (Nellcor)
SRC-2	Portable oximetry tester (Nellcor)
DS100A	DURASENSOR adult oxygen transducer (Nellcor)
OC-3	Cable, OXICLIQ Sensors (Nellcor)
D-YSE	Ear Clip (use with DURA-Y sensor) (Nellcor)
D-YSPD	Pedicheck Pediatric Spot-Check (use with DURA-Y Sensor) (Nellcor)
ASP-3	Sensor Assortment Pack (Nellcor)
05031-101	Diatek Probe Covers
5200-25	Temperature Cal. Key
01800-210	Model 9600 Temperature Cal. Kit 110V.
5200-85E	Operations Manual
5200-145E	Service Manual

* - Indicates that these parts can be traded in. If the part is under warranty, with a trade in you get full credit. If the parts is out of warranty, you will get a 40% discount from the price."

** - Only regional service centers may purchase these parts.

See section 1.1 for ordering parts.

2.4 Welch Allyn Vital Signs Monitor Maintenance and Service Support

Owner Maintenance: Non-Technical customers can perform normal maintenance per the instructions provided in the Operator Manual, Section **V**. End users will be able to perform basic operations such as replacement of: hoses, cuffs, probes, printer paper and batteries. On this level the unit will not be opened. However, opening of the WELCH ALLYN VITAL SIGNS MONITOR by untrained individuals may damage the unit and void the warranty.

Technical Service/Repair/Re-calibration: Properly trained and equipped biomedical departments and service centers will be able to utilize the content of this Service Manual. Technical skills in electronics and PC skills are required. These departments and centers must have service manual and re-calibration software, repair tools and test equipment as listed in this manual. They must also have minimum recommended quantities of repair parts and sub-assemblies. See the listings of repair parts and kits in this manual.

SECTION 3:

Problem Diagnosis

3.1 Overview

The Welch Allyn Vital Signs Monitor can be diagnosed and repaired to board level without the necessity of electrical schematics. However, these are provided to you in this manual for your convenience.

Repair/Replace decisions will be made on the basis of information obtained from Calibration Software, Test Software, Printed Troubleshooting tables as seen in this section and in the Error Code Chart.

With a few exceptions, individual circuit board components will not be on the repair bill of materials, and therefore can not be ordered.

3.2 Diagnostic Procedure for Returned Units

NOTES:
A. The word "unit" in this text refers to the WELCH ALLYN VITAL SIGNS MONITOR.
B. Menu|Choice represents menu commands. Rather than use the phrase "choose the exit command from the File menu."

1. Remove the battery from the unit. Connect the unit to the power supply. Set the power supply to 6.0 Vdc +/- 0.5 Vdc.

2. With a digital multi-meter, check the voltage of the battery. If the voltage of the battery is less than 6.0 Vdc, the battery needs to be charged. Up on completion of this procedure, place the battery back into the unit and plug in the charger. Let the battery charge for 8 hours. Next allow the unit to sit for 1 day and recheck the battery voltage. If the voltage is below 6.0 Vdc, change the battery. **(Reference section 4.15)**

3. Power up the unit. If the unit does not power up:
   A. Insure the power supply is on and has the correct requirements as called out in 1. (see above).
   B. The power supply is connected to the unit.
   C. Change the main PCB. **(Reference section 4.3)**
   D. Change the display PCB. **(Reference section 4.6)**

If the unit does power up:

4. To check the display PCB, observe the unit during power up. All of the LEDs should be lit for 1-2 seconds before the unit gets to its normal mode. If the unit has any LEDs out change the display PCB. **(Reference section 4.6)**

5 Run a couple of blood pressure cycles to ensure proper inflation/deflation.

6. If the unit is not inflating/deflating properly:
   A. Open up the unit by removing the 6 housing screws.
   B. Check the unit for pinched tubing if the unit is deflating too slowly. With the housing opened, re-run the blood pressure cycle to see if the deflating problem has been fixed. Re-route tubing.
   C. If there are no pinched tubes, change the valve. **(Reference section 4.13)**

D. If this still does not clear up the problem of deflation too slow, ensure there is no blocking of the tubing/port/valve in the unit.
E. Power down the unit. Place unit into detailed test mode by holding down the "start" and "cancel" buttons as power is re-applied. Press the review button until "cal" appears in the systolic window. Press the "start" button to close the valve. Pump up the unit using the bulb and valve inflate the unit to 250 mmHg. Confirm the unit meets the specification for leak called out in the Repair Test Specification document. If the unit is leaking:
F. Pinch off the tubing leading to the pump. If this stops the leak, change the pump. **(Reference section 4.10)**
G. Pinch off the tubing leading to the valve. If this stops the leak, change the valve. **(Reference section 4.11)**
H. Pinch off the tubing leading to the transducer. If this stops the leak, change the transducer. **(Reference section 4.4)**

7. Using a BP simulator, allow the unit to attempt a BP reading. If the unit is inflating/deflating properly however there is no reading given, change out the main PCB. **(Reference section 4.2)**

8. **FOR THE PRINTER OPTION:** Load the printer with paper if there is no paper. Press the form feed button to see if that will advance the paper. Next, press the print button to see if the unit will print. If these functions do not work, first change the printer PCB and re-test. If the problem is still evident, change out the printer itself. **(Reference section 4.12)**

9. **FOR THE SpO_2 OPTION:** Connect the patient simulator to the unit SpO_2 connection by the Nonin or Nellcor cable (depending upon which is installed). Confirm readings equal to the specifications called out in Section 7. If there is no reading, change out the SpO_2 connector and PCB. **(Reference section 4.8 or 4.9 depending on which SpO_2 Module is installed)**

10. **FOR THE TEMPERATURE OPTION:** Plug in the Diatek 9600 calibrator and set it for 96.4 F/ 35.8 C or use a water bath between 84 F (28.8 C) and 106 F (41.1 C). Remove the temperature probe and view the temperature window on the display. Make sure the temperature is in the "monitor mode." This will be displayed at the bottom of the window. If the unit is not in monitor mode, wait approximately 40-60 seconds and the unit will automatically transfer into the monitor mode. Place the probe into the small hoe on top of the 9600 calibrator or into bath. If there is no reading place the probe back into its housing, remove and retry. If there is still no reading, change the probe and retry the test. If there is still no reading place the probe back into the housing, unplug the probe and plug in the cal-key, remove the probe and Confirm reading meets specifications called out in Section 7. If there is no reading at this point, change the temperature connector and PCB. **(Reference section 4.7)**

11. **FOR THE RS232/RS423 OPTION:** Connect the RS232 cable from the PC to the unit. Select ***Unit/Information*** in the repair software. If a communication error appears on the PC screen, check the connection to the unit and the PC. Select ***Tools/Options*** to insure that the communication port that the cable is connected to is selected. Re-try the test. If the error is still present change out the main PCB. **(Reference section 4.2)**

3.3 Calibration Procedure

3.3.1 VOLTAGE CALIBRATION

1. Connect the unit to the test station by hooking up the pneumatic tubing, cable from the PC, and removing the battery and connecting the power supply.

2. Place the unit into the "detailed test mode" by holding down the start and cancel buttons while powering up the unit. Allow the software versions to be displayed then press the review button until the unit displays "BAT" in the systolic window.

3. Go to the repair software and choose ***Calibrate/Voltage.*** Adjust the power supply to between 5.6 Vdc and 5.9 Vdc.

4. View the digital multi-meter (DMM) that is connected to the power supply reading the voltage. Move the cursor to the "Calibrated Voltage" box and type in the voltage that you observe on the DMM. In the software, click on "Update."

5. The software will then prompt you to enter in a "Calibration Signature." Move the cursor to the box and enter the three initials of your name. Then click "OK."

6. At this point you should see the voltage on the display of the WELCH ALLYN VITAL SIGNS MONITOR change to match that of the DMM.

7. Adjust the power supply to 6.0 Vdc ± .05 Vdc.

3.3.2 PRESSURE CALIBRATION

1. Connect the unit to the test station by hooking up the pneumatic tubing, cable from the PC, and removing the battery and connecting the power supply.

2. Place the unit into the "detailed test mode" by holding down the start and cancel buttons while powering up the unit. Allow the software versions to be displayed then press the review button until the unit displays "CAL" in the systolic window. Make sure that clamps are on the 100cc and 250cc volumes.

3. Go to the repair software and choose ***Calibrate/Manometer.***

4. Press the "Calibrate" button to begin the calibration procedure.

5. The software will first check to make sure that the units internal temperature is below 32°C. If it is not the user will be warned that they can not perform a calibration at this time.

6. If the temperature is within the 32°C limit the software will tell the unit to perform an auto-zero. If this is unsuccessful the user will be prompted to perform a zero potentiometer calibration. This is an automatic calibration. The user just needs to answer **YES** or **NO.** A **no** will cancel the calibration procedure.

7. Once a successful autozero has been completed the "Gain Calibration at 200 mmHg" box will be activated. This box consists of a slider control and a pressure display. To perform the span calibration pump the unit up to 200 mmHg +/- 5 mmHg using the bulb. Wait 15 seconds to allow the pressure to stabilize. Adjust the slide control until the reading on the PC matches as close as possible to the reading on the pressure standard. Once the difference has been minimized, Press "record" and proceed.

8. Once the gain calibration is complete the pressure calibration points can be calibrated. There are three points that require calibration, 95, 195 and 285 mmHg. First set the pressure to the desired value within +/- 5 mmHg of that value. Wait 15 seconds to allow the pressure to stabilize. Adjust the slide control until the reading on the PC matches as close as possible to the reading on the pressure standard. Press "record" after each setting. YOU MUST DO THIS FOR ALL THREE VALUES. Once this is completed press the "update" button.

9. The software will then prompt you to enter in a "Calibration Signature." Move the cursor to the box and type the three initials of your name. Then click "OK."

10. Press **Close** to exit the calibration dialog box.

3.4 Loading Unit Software

***WARNING: DO NOT REMOVE POWER OR TURN OFF UNIT DURING THE SOFTWARE LOADING OPERATION. The unit will be in an unrecoverable state if this happens.**

1. Plug the wall transformer into the Welch Allyn Vital Signs Monitor.

2. Connect the unit to the RS232 cable of the test station.

3. Start the Repair Software by clicking on its icon. Go into Unit/Update Software.

4. Press the “Select File” button in the software.

5. Choose the correct unit software (zenXXX.mot) file per instructions from the manufacturer. (Where “XXX” is the number of the software version to be loaded)

6. Once the software file is selected, press the “OK” button. This will return you to the Repair Software. The Repair Software will then ensure that the zenXXX.mot file you are about to load into the unit is “Valid.” If so, press the “Load” button in the software. The unit will take about 10 minutes to load the software. (If the software file you have chosen is “Not Valid,” repeat steps 4 and 5, choose the correct version and then proceed. If problems persist, please contact your nearest Regional Service Center.)

   NOTE: If the computer or the software malfunctions during the software loading operation, re-boot the computer, re-start windows and start the Repair Software. The Repair Software will start in the “Recovery Mode.” The software will prompt you to continue/resume the software loading process.

3.5 Welch Allyn Vital Signs Monitor Self Diagnostic Fault Codes

The following is a list of all possible error codes and their meanings.

MAIN BOARD ERROR CODES

ERROR CODE	DESCRIPTION
C01	User abort
C02	Auto-zero failure
C03	Inflation too fast
C04	Inflation too long
C05	Excessive noise
C06	Outside measuring range
" "	BP not available
E10	Over pressure
E11	Fail-safe violation
E12	Ambient temp. limit
E13	Battery failure
E15	Over 15mmHg test error
E16	Under 15mmHg test error
E20	Missed A/D sample
E30	FPROM failure
E31	SRAM failure
E32	Factory EPROM checksum fail
E33	User EPROM checksum failure
E34	A/D converter failure
E35	SpO_2 PCB failure
E36	Temperature PCB failure
E37	Printer failure
E38	Real time clock failure
E39	No Calibration Signature

SpO_2 BOARD ERROR CODES (Both Nonin and Nellcor)

ERROR CODE	DESCRIPTION
"—"	Sensor error
E7	SpO_2 PCB bad
" "	SpO_2 off

TEMPERATURE BOARD ERROR CODES

ERROR CODE	DESCRIPTION
E0.1	Probe heater accumulator
E0.2	probe A/D pulse width
E0.3	Adaptive probe gain too high or too low
E1.1	Ambient temperature too high
E1.2	Ambient temperature too low
E2.1	Battery low
E3.1	RAM read/write error
E3.2	ROM checksum error
E3.3	CPU instruction error
E4.0	PTB resistor A/D pulse width error
E4.1	RatioCal resistor A/D pulse with error
E4.2	External ambient thermistor A/D pulse width error
E5.0	Heater circuit error
E5.1	Heater overheated error
E5.2	Heater watchdog time out error
E6.0	PTB resistor “temperature” error
E9.1	Communication error
E12	Ambient temperature limit

3.6 Complaint/ Cause/ Corrective Action

COMPLAINT	CAUSE	CORRECTIVE ACTION
Does Not Power Up	Battery Voltage LOW	Check Voltage Level
	Battery Voltage Less Than 5.4 Volts.....	Charge Battery
	Battery Connector	Verify Connection And Replace Required
	Charge Light not on when Charger Plugged in	Change Main PCB.U28 is blown.
Constant Alarm	Overpressure	Check For Pinched/Blocked Hose
	Hardware Fails	Verify Performance Of The Following Parts: A) Transducers B) Valve C) Main PCB
Air Leak	Pneumatic Connector	Check Seals
	Pump.....	Verify Proper Operation
	Valve	Verify Proper Operation Check Valve Drivers
	Unit Tubing.....	Verify Connectors And Integrity Of Hoses
	Cuff	Verify Air Seal Of Coiled Hose And Cuff Connectors Verify Air Seal From Pneumatic Connector Of Welch Allyn Vital Signs Monitor To Coiled Hose.
SpO_2 Failure	SPO2 Board And Harness..	Replace Sensor And Retest. Verify All Connections To The SpO_2 Board Replace SpO_2 Board.

COMPLAINT	CAUSE	CORRECTIVE ACTION
Temp Failure	Probe	Replace Probe And Retest
	Diatek Board & Harness	Verify All Connections To The Temperature Board.
	Opto-Reflector.....	Verify Probe Is Seen When Removed From Holster.
	Connector PCB	Verify That The Temp Probe Connector Is Properly Seated In The Connector On The Unit. Verify That The Connector From Diatek Board Is Connected To The Connector On The PCB.
	Temp. Error Code	See Page 19
Printer Failure	Flex Cable (Main PCB To Printer PCB).....	Verify That The Flex Cable From The Main PCB Is Fully Seated In The Board Cable Connectors.
	Flex Cable (Printer To Printer PCB).....	Verify That The Flex Cable From The Printer To The Printer PCB Is Fully Seated In The Board Cable Connector.
	Paper Jam.....	Check Condition Of Paper Roll In The Printer Housing.
	Printer Home Position	Verify That The Printer Head Fully Actuates The Printer Home Switch.
BP Readings High		See page 19 for ways to check to ensure the monitor is accurate.

CHECKLIST FOR COMPARING AUTOMATED BP MONITORING TO MANUAL METHODS

- Blood pressure can vary between the left and right arm by as much as 20 mmHg on some patients. When comparing the Welch Allyn measurement to a manual reading on an opposite arm it is important to repeat the comparison after switching arms and then compare the average of both readings. This will help to eliminate the difference between the two arms.

- A person's blood pressure is continuously changing in reaction to their environment and physical state. Posture changes, conversation and other influences can easily cause a person's blood pressure to change dramatically. When comparing the Welch Allyn measurement to a subsequent manual reading on the same arm it is important to enure that the person's blood pressure has stabilized. To determine this, it is best to take a manual reading before and after the Welch Allyn reading. A stable subject should not have a change in systolic or diastolic of more than 5 mmHg.

- It is very important that both of the subject's arm remain in the same relative location throughout the test. One inch of elevation change will result in 1.8 mmHg change in the systolic and diastolic pressures.

- When taking the manual auscultatory reading it is very important to maintain a 3 mmHg/sec deflation rate. This deflation has been prescribed by the American Heart Association. Deflating the cuff too rapidly will result in an inaccurate blood pressure reading.

- Hearing acuity vary from individual to individual an can cause different blood pressure measurements on the same subject. This effect is compounded when a subject has very weak Korotkoff sounds. When taking auscultatory readings for comparison to the Welch Allyn, it is best to use a teaching stethoscope with two sets of binaurals and two persons trained in taking blood pressures. The two observers should write down their readings and not reveal the readings to each other, which may introduce bias. The two observers should agree within 5 mmHg for both systolic and diastolic, and the average of their readings used for the comparison. Inability of the two observers to agree within 5 mmHg denotes a subject which cannot be repeatedly measured by auscultation and should not be used for comparison.

- Proper cuff sizing is important. Using a cuff that is too small or too large will result in inaccurate blood pressure readings.

- Some situations can introduce a psychological bias in the auscultatory readings. For instance, a drug testing clinic wishing for subjects with systolic pressure below an acceptance threshold may result in biased low systolic readings, in some instances.

CHECKLIST FOR COMPARING BP MEASUREMENTS MADE WITH THE WELCH ALLYN TO OTHER AUTOMATED MONITORS

- The Welch Allyn monitor has been validated according to the AAMI protocol using auscultatory readings. Many other manufacturer's monitors have been validated to the AAMI protocol *intra-arterial* blood pressure readings. Intra-arterial blood pressure readings do not necessarily agree with auscultatory readings. In fact, it is common for the diastolic pressure determined intra-arterially to be 7-10 mmHg lower than an auscultatory reading.

- Blood pressure can vary between the left and right arm by as much as 20 mmHg on some patients. When comparing the Welch Allyn measurement to a manual reading on an opposite arm it is important to repeat the comparison after switching arms and then compare the average of both readings. This will help to eliminate the difference between the two arms.

- A person's blood pressure is continuously changing in reaction to their environment and physical state. Posture changes, conversation and other influences can easily cause a person's blood pressure to change dramatically. When comparing the Welch Allyn measurement to a subsequent manual reading on the same arm it is important to enure that the person's blood pressure has stabilized. To determine this, it is best to take a manual reading before and after the Welch Allyn reading. A stable subject should not have a change in systolic or diastolic of more than 5 mmHg.

- It is very important that both of the subject's arm remain in the same relative location throughout the test. One inch of elevation change will result in 1.8 mmHg change in the systolic and diastolic pressures.

- Proper cuff sizing is important. Using a cuff that is too small or too large will result in inaccurate blood pressure readings.

TEMPERATURE ERROR CODE CORRECTION

1. Turn the unit off.
2. Hold down the “Start” button as you turn the unit back on. Continue to hold down the “Start” button until the alarm signals dissipate.
3. Make sure that you see either a “2.4” or a “24” in the temperature window.
4. Press the “Review” button and you should see “CAL” in the systolic window.
5. Press the “Review” button again and you should see “BAT” in the systolic window.
6. Press the “Review” button again and make sure that three dashes (---) appear in the temperature window.
7. Once this has been confirmed, press the “Review” button until you see “2.4” or “24” in the temperature window. Make sure the probe is in the housing.
8. Turn the unit off, then turn the unit on allowing it to boot up into its normal mode.
9. Allow the “PC” to disappear from the temperature window.
10. Remove the probe from the housing. You should see a “1888” then “ORL” appear. If not, contact your local service department.

3.7 TROUBLE SHOOTING GUIDE

Symptom	Possible Cause	Explanations and Corrective Action
1. Inaccurate Blood Pressure Readings Please note: Differences '10mmhg should be considered 'normal and will occur for a number of reasons including intrapatient BP variability, observer hearing differences, and auscultatory deflation rate.	**Incorrect Cuff Size**	**Determine correct cuff size:** · use reference markings on cuff · measure patient's arm circumference midway between elbow and shoulder (see page 42 of Operator's Manual to select correct cuff size).
	Patient's Arm Position	**Ensure Patient's arm is at heart level.**
	Arm Movement During blood pressure cycle	**Keep arm still during blood pressure cycle:** · movement may cause inaccuracies from artifact
	Blood Pressure taken over clothing	**Blood Pressure should be taken on a bare arm.**
	Arrhythmia	**Check for regularity of heart rate: (palpate pulse or check monitor)** · moderate to severe heart rate irregularities may make blood pressure difficult to measure.
	Incorrect Reference	**Use 4th Korotkoff sound to determine diastolic blood pressure.** · Many listener's incorrectly equate diastolic blood pressure with the disappearance of sound. The Vital Signs Monitor was developed using the 4th sound, as recommended by the American Heart Association.
	Change in blood pressure from auscultatory reading to Vital Signs Monitor reading	**Deflate cuff no faster than 3mmhg per second:** · One of the major sources of error in auscultatory blood pressure measurement is deflating the cuff to quickly. The American Heart Association recommends deflation no faster than 3mmhg per second. **Only use a spygnomometer that is known to be in calibration:** · Blood pressure taken with un-calibrated sphygmomanometer may be very inaccurate. **Check blood pressure immediately prior to Vital Signs Monitor Reading**
	Poor auscultatory sound recognition by observer	**Use higher quality stethoscope** **Have a different observer check patient's blood pressure**

3.7 TROUBLE SHOOTING GUIDE

Symptom	Possible Cause	Explanations and Corrective Action
2. Cuff Inflation & Deflation With No Blood Pressure Reading Displayed. (or error code in display)	**Leak in pneumatic system**	**Make sure all cuff attachments are tight.** **Carefully check for tubing leaks on blood pressure cuff and tubing attachment to monitor.**
	Arm Movement During Cycle	**Keep arm still during blood pressure cycle:** • movement may cause inaccuracies from artifact.
	Tubing Movement Artifact	**Do not contact tubing during blood pressure cycle** • movement may cause inaccuracies from artifact.
3. No Cuff Inflation	**Connections from monitor to cuff loose**	**Check all connections. (Do not over tighten).**
4. Temperature Malfunction • Error code displayed	**Broken Probe**	**Replace Probe** **Consult Technical Manual** **Notify Biomedical department or Welch Allyn Customer Service (800) 854-2904**
• Low Temperature Readings	**Improper Probe Placement**	**Place probe in most posterior sublingual pocket**
• No Temperature Displayed	**Probe not Replaced**	**Notify biomedical or Welch Allyn Customer Service.** **Replace probe in holder prior to taking another temperature.**
5. SPO2 Malfunction • Sensor in place but no SPO2 on display	**Improperly attached sensor**	**insert the patient's finger completely into sensor**
	Cable incorrectly plugged into monitor	**Be sure sensor cable is correctly plugged into monitor**
	SPO2 disabled	**Be sure SPO2 is enabled with Mode button -** (SPO2 light will be off when disabled)
• Inaccurate SPO2 Reading	**Incorrect Sensor**	**Assure that correct manufacturers sensor is in use -** they are not interchangeable

3.7 TROUBLE SHOOTING GUIDE

Symptom	Possible Cause	Explanations and Corrective Action
6. Printer Malfunction	**Paper will not advance**	**Consult Technical Manual** **Notify Biomedical or Welch Allyn Customer Service.**
7. Monitor Will Not Power Up	**Low Battery** **Monitor not plugged in**	**Check connections between monitor and transformer and wall receptacle.** **Unplug unit from wall receptacle and check for breaks in cord. If connections secure and power supply is intact.** **Notify Biomedical Department or Welch Allyn Customer Service.**
8. Cuff Too Tight (over inflation)	**Pressure Preset too high**	**Check pressure preset setting:** · Unless patient has underlying systolic hypertension, set pressure preset at 160mmhg. (If Systolic blood pressure is greater than 'pressure preset, monitor will automatically 'increase an additional 40mmhg).
9. Cuff Popping Off	**Inappropriate size cuff** **Cuff applied inside out**	**Determine cuff size with the cuff markings or refer to chart in Operator's Manual for determining cuff size.** · If cuff continues to pop off, notify Biomedical Department or Welch Allyn Customer Service. **Re apply cuff:** · make sure smooth surface of velcro is facing patients arm
10. Cuff Deflating Too Slowly	**Normal Operation** **Pressure Preset too high**	**Deflate cuff no faster than 3mmhg per second:** · One of the major sources of error in auscultatory blood pressure measurement is deflating the cuff too quickly. The American Heart Association recommends deflation no faster than 3mmhg per second. **Check pressure preset setting**

SECTION 4:

Major Component Removal

4.1 Front Housing

ABSTRACT:

4.1 Opening up the ***front housing*** is necessary when replacing the main fuse. Complete removal of the front housing is necessary to replace the main printed circuit board (PCB), display board, switch pad and other components.

4.1.1 Preparing the unit for disassembly.

__ **Turn** unit off and **disconnect** AC power cord from the unit.
__ **Disconnect** all accessories from the unit.
__ If the unit is pole mounted, **remove** unit from the pole.
__ If the unit is wall mounted, **remove** unit from the wall.
__ If the unit is free standing, **turn** the back towards you.

4.1.2 Battery cover removal.

__ **Remove** four (4) Phillips head screws from the battery door. **Use T112918 with the #4 Phillips bit.**
__ **Remove** battery door.

4.1.3 Battery removal from battery compartment.

__ **Remove** the battery out of the compartment by turning the unit upside down and shaking until battery begins to slide out.
__ **Disconnect** the two (2) connectors.
__ (If the battery is to be discarded, **comply** with all environmental regulations pertaining to battery disposal.)

4.1.4 Opening front housing.

__ **Position** unit so the front panel is facing down.
__ **Remove** six (6) Phillips screws with T112918 and the #6 Phillips bit.
__ **Carefully separate** the front and rear housings.

4.1.5 Disconnection of connectors.

__ **Disconnect** the connector (red) from top of main board to relieve strain.
__ **Unplug** main 14-pin connector (red) from center of main PCB.
__ **Disconnect** pressure lines from transducers.
__ **Disconnect** the printer flex circuit from the main board.
__ **Disconnect** 7-pin connector coming from the temperature connector PCB to the temperature PCB.
__ **Disconnect** the green wire 2-pin connector from the main board. Note the orientation of the green wire. It is towards the center of the main PCB, or away from the temperature board.
__ **Disconnect** the temperature PCB.
__ **Remove** the main PCB by removing the 7 torx screws with T112917 and the torx t8 bit. Disconnect the flex cable that connects to the display PCB. **Remove** the main PCB.
__ **Remove** the 7 gray spacers.
__ **Remove** the display PCB from front housing.

The front housing is now free.

Replace the front housing by assembling in reverse order following these special instructions.

4.1.6 Reconnecting the connectors.

__ **Reconnect** the green wire 2-pin connector to the two male pins on the main board with the wire contact (away from) the temperature board.

__ **Carefully** align all other connectors and flex circuits in mating connectors.

Reassemble in reverse order. No special techniques required.

4.1.7 Verification of repair.

__ **Switch** the unit to 'on' and **perform** a full functional check.

4.2 Main Printed Circuit Board (main PCB)

ABSTRACT:

4.2 Removing and replacing the ***main PCB*** requires that you remove the battery, split the cases, unplug one pneumatic line and electrical connectors. The small temperature board will be removed in the process. It can be swapped over to the replacement main PCB. It is held on by two of the seven torx fasteners.

4.2.1 Preparing the unit for disassembly.

__ **Turn** unit off and **disconnect** AC power cord from the unit.
__ **Disconnect** all accessories from the unit.
__ If the unit is pole mounted, remove unit from the pole.
__ If the unit is wall mounted, **remove** unit from the wall.
__ If the unit is free standing, **turn** the back towards you.

4.2.2 Battery cover removal.

__ **Remove** four (4) Phillips head screws from the battery door.
Use T112918 with the #4 Phillips bit.
__ **Remove** battery door.

4.2.3 Battery removal from battery compartment.

__ **Remove** the battery out of the compartment by turning the unit upside down and shaking until battery begins to slide out.
__ **Disconnect** the two (2) connectors.
__ (If the battery is to be discarded, **comply** with all environmental regulations pertaining to battery disposal.)

4.2.4 Opening front housing.

__ **Position** unit so the front panel is facing down.
__ **Remove** six (6) Phillips screws with T112918 and the #6 Phillips bit.
__ **Carefully separate** the front and rear housings.

4.2.5 Note the orientation of the green wire. It is towards the center of the main PCB, or away from the temperature board.

The front housing is now free of the rear housing.

4.2.6 Removal of temperature board from main PCB.

__ **Unscrew** two torx fasteners with T112917 with the torx t8 bit and lift the temperature board up and set it aside.

4.2.7 Separating the main PCB from the display PCB.

__ **Unplug** the main PCB to display PCB flex circuit.
__ **Remove** five (5) remaining torx fasteners with T112917 with the torx t8 bit and lift the main PCB out of the front housing. Watch for the 7 gray spacers.

Reassemble in reverse order with attention to the following details

4.2.8 Attaching the temperature board to the main PCB.

__ **Make sure** all of the seven (7) gray plastic board spacers are in place before placing the main PCB over the display PCB.

__ **Insert** and tighten five of the last fasteners that were removed.

__ **Place** the temperature board onto the main PCB and secure it with two torx fasteners.

4.2.9 **Reconnect** the temperature board connector to the main PCB socket.

Reassemble in reverse order

4.2.10 Verification of repair.

__ **When completely assembled, switch** the unit to 'on' and **perform** a full functional check, including recalibration.

4.3 DC to DC Converter (SpO_2 Units Only)

ABSTRACT:

4.3 To replace the **DC to DC converter,** it is necessary to remove the main PCB.

4.3.1 Preparing the unit for disassembly.

__ **Turn** unit off and **disconnect** AC power cord from the unit.
__ **Disconnect** all accessories from the unit.
__ If the unit is pole mounted, remove unit from the pole.
__ If the unit is wall mounted, **remove** unit from the wall.
__ If the unit is free standing, **turn** the back towards you.

4.3.2 Battery cover removal.

__ **Remove** four (4) Phillips head screws from the battery door.
Use T112918 with the #4 Phillips bit.
__ **Remove** battery door.

4.3.3 Battery removal from battery compartment.

__ **Remove** the battery out of the compartment by turning the unit upside down and shaking until battery begins to slide out.
__ **Disconnect** the two (2) connectors.
__ (If the battery is to be discarded, **comply** with all environmental regulations pertaining to battery disposal.)

4.3.4 Opening front housing.

__ **Position** unit so the front panel is facing down.
__ **Remove** six (6) Phillips screws with T112918 and the #6 Phillips bit.
__ **Carefully separate** the front and rear housings.

4.3.5 Disconnection of connectors.

__ **Disconnect** the connector (red) from top of main board to relieve strain.
__ **Unplug** main 14-pin connector (red) from center of main PCB.
__ **Disconnect** pressure lines from transducers.
__ **Disconnect** the printer flex circuit from the main board.
__ **Disconnect** 7-pin connector coming from the temperature connector PCB to the temperature PCB.
__ **Disconnect** the green wire 2-pin connector from the main board.
Note the orientation of the green wire. It is towards the center of the main PCB, or away from the temperature board.

The front housing is now free of the rear housing.

4.3.6 Separating the main PCB from the display PCB.

__ **Unplug** the main PCB to display PCB flex circuit.

__ ***Remove*** seven (7) torx fasteners with T112917 with the torx t8 bit and lift the main PCB and the temperature PCB out of the front housing.

4.3.7 Replacing the DC to DC converter from the main PCB.

__ **Peel** off the rtv surrounding the old converter.

__ **De-solder** the old converter.

__ **Clear** the 8 holes out with a thru-hole solder sucker.

__ **Install** a replacement converter as per figure 4.4.7 below.

__ **Secure** with rtv (innerbond i-45) on all four sides.

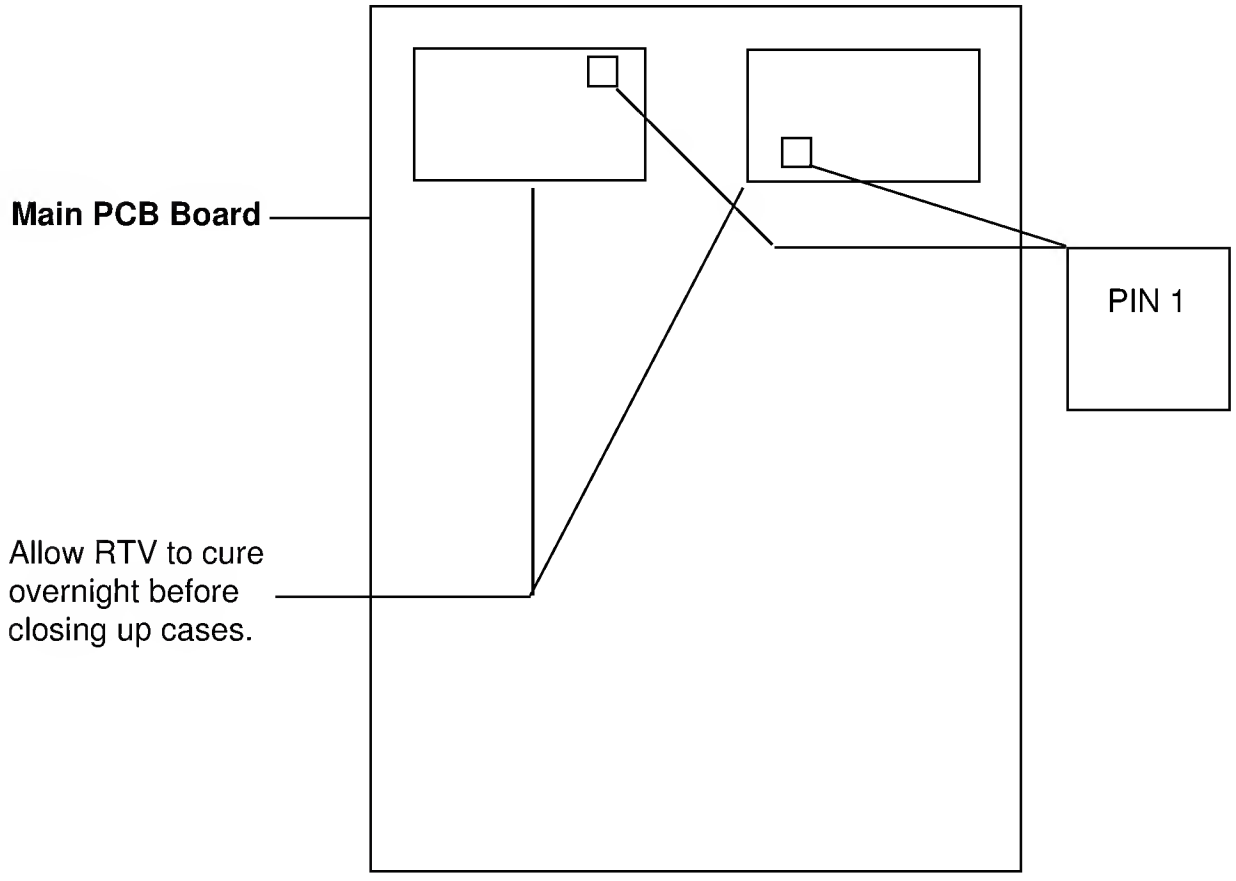

Figure 4.4.7

Reassemble in reverse order, no special techniques required.

4.3.8 Verification of repair.

__ **When completely assembled, switch the unit to on and do a full functional check, including calibration.**

4.4 Pressure Transducers On Main PCB

ABSTRACT:

4.4 To replace the ***pressure transducer*** on the main PCB, it is necessary to remove the main PCB.

4.4.1 Preparing the unit for disassembly.

__ **Turn** unit off and **disconnect** AC power cord from the unit.
__ **Disconnect** all accessories from the unit.
__ If the unit is pole mounted, remove unit from the pole.
__ If the unit is wall mounted, **remove** unit from the wall.
__ If the unit is free standing, **turn** the back towards you.

4.4.2 Battery cover removal.

__ **Remove** four (4) Phillips head screws from the battery door.
Use T112918 with the #4 Phillips bit.
__ **Remove** battery door.

4.4.3 Battery removal from battery compartment.

__ **Remove** the battery out of the compartment by turning the unit upside down and shaking until battery begins to slide out.
__ **Disconnect** the two (2) connectors.
__ (If the battery is to be discarded, **comply** with all environmental regulations pertaining to battery disposal.)

4.4.4 Opening front housing.

__ **Position** unit so the front panel is facing down.
__ **Remove** six (6) Phillips screws with T112918 and the #6 Phillips bit.
__ **Carefully separate** the front and rear housings.

4.4.5 Disconnection of connectors.

__ **Disconnect** the connector (red) from top of main board to relieve strain.
__ **Unplug** main 14-pin connector (red) from center of main PCB.
__ **Disconnect** pressure line from transducers.
__ **Disconnect** the printer flex circuit from the main board.
__ **Disconnect** 7-pin connector coming from the temperature connector PCB to the temperature PCB.
__ **Disconnect** the green wire 2-pin connector from the main board.
Note the orientation of the green wire. It is towards the center of the main PCB, or away from the temperature board.

The front housing is now free of the rear housing.

4.4.6 Separating the main PCB from the display PCB.

__ **Unplug** the main PCB to display PCB flex circuit.
__ **Remove** seven (7) torx fasteners with T112918 with the torx t8 bit and lift the main PCB and the temperature PCB out of the front housing.
__ **Do not lose** the 7 gray spacers.

4.4.7 Replacing the pressure transducer on the main PCB.

__ **De-solder** the old transducer.

__ **Clear** the 6 holes out with a thru-hole solder sucker.

__ **Install** a replacement pressure transducer per figure 4.5.7 below.

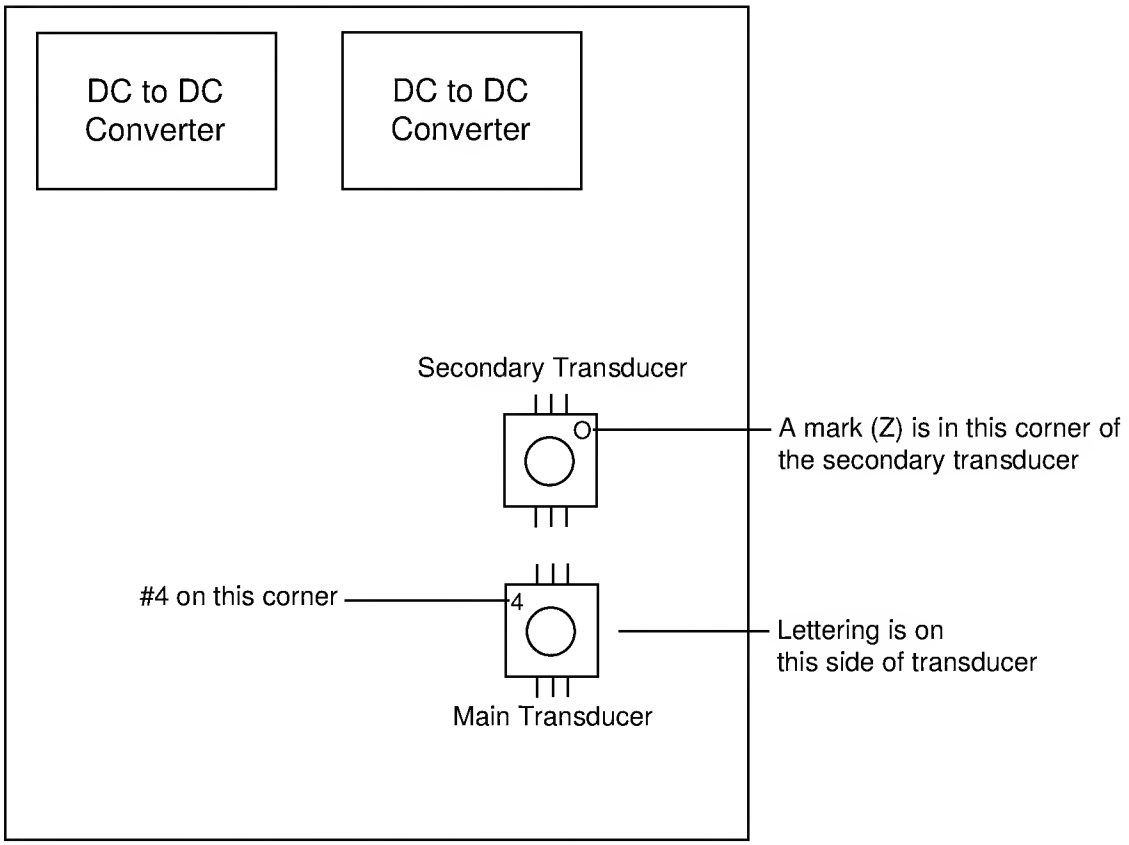
DC to DC Converter
DC to DC Converter
Secondary Transducer
A mark (Z) is in this corner of the secondary transducer
#4 on this corner
4
Lettering is on this side of transducer
Main Transducer

Figure 5.5.7

Reassemble in reverse order, no special techniques required.

4.4.8 Verification of repair.

__ **When completely assembled, switch** the unit to 'on' and **perform** a full functional check, including recalibration.

4.5 Display Printed Circuit Board (Display PCB)

ABSTRACT:

4.5 Removing and replacing the ***display PCB*** requires that you remove the battery, split the cases, unplug one pneumatic line and electrical connectors, remove the temperature PCB and main PCB.

4.5.1 Preparing the unit for disassembly.

__ **Turn** unit off and **disconnect** AC power cord from the unit.
__ **Disconnect** all accessories from the unit.
__ If the unit is pole mounted, remove unit from the pole.
__ If the unit is wall mounted, **remove** unit from the wall.
__ If the unit is free standing, **turn** the back towards you.

4.5.2 Battery cover removal.

__ **Remove** four (4) Phillips head screws from the battery door.
Use T112918 with the #4 Phillips bit.
__ **Remove** battery door.

4.5.3 Battery removal from battery compartment.

__ **Remove** the battery out of the compartment by turning the unit upside down and shaking until battery begins to slide out.
__ **Disconnect** the two (2) connectors.
__ (If the battery is to be discarded, **comply** with all environmental regulations pertaining to battery disposal.)

4.5.4 Opening front housing.

__ **Position** unit so the front panel is facing down.
__ **Remove** six (6) Phillips screws with T112918 and the #6 Phillips bit.
__ **Carefully separate** the front and rear housings.

4.5.5 Disconnection of connectors.

__ **Disconnect** the connector (red) from top of main board to relieve strain.
__ **Unplug** main 14-pin connector (red) from center of main PCB.
__ **Disconnect** pressure line from transducers.
__ **Disconnect** the printer flex circuit from the main board.
__ **Disconnect** 7-pin connector coming from the temperature connector PCB to the temperature PCB.
__ **Disconnect** the green wire 2-pin connector from the main board.
Note the orientation of the green wire. It is towards the center of the main PCB, or away from the temperature board.

The front housing is now free of the rear housing.

4.5.6 Separating the main PCB from the display PCB.

__ **Unplug** the main PCB to display PCB flex circuit.

__ **Remove** seven (7) torx fasteners with T112918 torx t8 bit and lift the main PCB and the temperature PCB out of the front housing.

__ **Remove** the seven (7) gray board spacers as they will be reused.

4.5.7 Removing the display PCB from the front housing.

__ Gently **lift** the display board out of the front housing.
Be careful not to damage the exposed LED's.

Reassemble in reverse order with attention to the following details.

4.5.8 Place display PCB into front housing.

__ **Seat** the display PCB over screw bosses.

__ **Place** 7 spacers over front housing bosses projecting through PCB and seat them securely against the surface of the PCB.

4.5.9 Attaching main PCB to the display PCB and front housing.

__ **Use** all seven gray spacers to prevent damage to the boards.

__ Gently **lay** the main PCB onto the spacers (component side up) so that all of the holes line up.

__ **Insert** and **tighten** five (5) torx fasteners with T112917 with the torx t8 bit.

4.5.10 Attaching the temperature board (option).

__ **Align** the temperature board so that the component side faces towards the center of the unit.

Continue reassembly in reverse order of disassembly.

4.5.11 Verification of repair.

__ **When completely assembled, switch** the unit to 'on' and **perform** a full functional check, including recalibration.

4.6 Key Pad (Switch Array)

ABSTRACT:

4.6 Removing and replacing the ***key pad*** requires that you remove the battery, split the cases, unplug one pneumatic line and electrical connectors, and remove the main and display PCB's from the front housing. If the key pad is being removed for suspected moisture or contamination, replace it with a new one once the PCB is cleaned.

4.6.1 Preparing the unit for disassembly.

__ **Turn** unit off and **disconnect** AC power cord from the unit.
__ **Disconnect** all accessories from the unit.
__ If the unit is pole mounted, remove unit from the pole.
__ If the unit is wall mounted, **remove** unit from the wall.
__ If the unit is free standing, **turn** the back towards you.

4.6.2 Battery cover removal.

__ **Remove** four (4) Phillips head screws from the battery door.
Use T112918 with the #4 Phillips bit.
__ **Remove** battery door.

4.6.3 Battery removal from battery compartment.

__ **Remove** the battery out of the compartment by turning the unit upside down and shaking until battery begins to slide out.
__ **Disconnect** the two (2) connectors.
__ (If the battery is to be discarded, **comply** with all environmental regulations pertaining to battery disposal.)

4.6.4 Opening front housing.

__ **Position** unit so the front panel is facing down.
__ **Remove** six (6) Phillips screws with T112918 and the #6 Phillips bit.
__ **Carefully separate** the front and rear housings.

4.6.5 Disconnection of connectors.

__ **Disconnect** the connector (red) from top of main board to relieve strain.
__ **Unplug** main 14-pin connector (red) from center of main PCB.
__ **Disconnect** pressure line from transducers.
__ **Disconnect** the printer flex circuit from the main board.
__ **Disconnect** 7-pin connector coming from the temperature connector PCB to the temperature PCB.
__ **Disconnect** the green wire 2-pin connector from the main board.
Note the orientation of the green wire. It is towards the center of the main PCB, or away from the temperature board.

The front housing is now free of the rear housing.

4.6.6 Separating the main PCB from the display PCB.

__ **Unplug** the main PCB to display PCB flex circuit.
__ **Remove** all seven (7) torx fasteners with T112918 with the torx t8 bit and lift the main PCB and temperature PCB out of the front housing.
__ **Remove** the seven (7) gray board spacers as they will be reused.

4.6.7 Removing the display PCB from the front housing.

__ Gently **lift** the display board out of the front housing. Be careful not to damage the exposed led's.

4.6.8 Removing the key pad.

__ Gently **peel** the old key pad away from the PCB.

__ **Inspect** the PCB for contamination and clean accordingly with alcohol. Allow the alcohol to evaporate for one minute then blow off lint. From this point on, do not touch contact surfaces.

Reassemble in reverse order with attention to the following details.

4.6.9 Attach new key pad to the display PCB..

__ **Lay** flexible key pad over PCB and exactly align protrusions over holes in PCB.

__ **Press** protrusions into holes with tool T-112067. Be careful not to tear keypad.

4.6.10 Place display PCB into front housing.

__ **Seat** the display PCB over screw bosses.

__ **Place** 7 spacers over front housing bosses projecting through PCB and seat them securely against the surface of the PCB.

4.6.11 Attaching main PCB to the display PCB and front housing.

__ **Use** all seven gray spacers to prevent damage to the boards.

__ Gently **lay** the main PCB onto the spacers (component side up) so that all of the holes line up.

__ **Insert** and **tighten** torx fasteners with T112917 with the torx t8 bit.

4.6.12 Attaching the temperature board (option).

__ **Align** the temperature board so that the component side faces towards the center of the unit.

Continue reassembly in reverse order of disassembly.

4.6.13 Verification of repair.

__ **When completely assembled, switch** the unit to 'on' and **perform** a full functional check, including recalibration.

4.7 Temperature PCB

ABSTRACT:

4.7 Removing and replacing the ***temperature PCB*** requires that you remove the battery, split the cases, unplug one pneumatic line and electrical connectors. The small temperature board can be removed by unscrewing two Phillips head screws which hold the board to the two small "I" brackets. it is not necessary to remove the brackets from the main PCB.

4.7.1 Preparing the unit for disassembly.

__ **Turn** unit off and **disconnect** AC power cord from the unit.
__ **Disconnect** all accessories from the unit.
__ If the unit is pole mounted, remove unit from the pole.
__ If the unit is wall mounted, **remove** unit from the wall.
__ If the unit is free standing, **turn** the back towards you.

4.7.2 Battery cover removal.

__ **Remove** four (4) Phillips head screws from the battery door.
Use T112918 with the #4 Phillips bit.
__ **Remove** battery door.

4.7.3 Battery removal from battery compartment.

__ **Remove** the battery out of the compartment by turning the unit upside down and shaking until battery begins to slide out.
__ **Disconnect** the two (2) connectors.
__ (If the battery is to be discarded, **comply** with all environmental regulations pertaining to battery disposal.)

4.7.4 Opening front housing.

__ **Position** unit so the front panel is facing down.
__ **Remove** six (6) Phillips screws with T112918 and the #6 Phillips bit.
__ **Carefully separate** the front and rear housings.

4.7.5 Disconnection of connectors.

__ **Disconnect** the connector (red) from top of main board to relieve strain.
__ **Unplug** main 14-pin connector (red) from center of main PCB.
__ **Disconnect** pressure line from transducers.
__ **Disconnect** the printer flex circuit from the main board.
__ **Disconnect** 7-pin connector coming from the temperature connector PCB to the temperature PCB.
__ **Disconnect** the green wire 2-pin connector from the main board.
Note the orientation of the green wire. It is towards the center of the main PCB, or away from the temperature board.

The front housing is now free from the rear housing

4.7.6 Removal of temperature board from "I" brackets on the main PCB.

__ **Disconnect connector from main board socket.**
__ **Disconnect** the temperature connector cable from the temperature PCB.
__ **Unscrew** two torx fasteners with T112917 with the torx t8 bit and lift the temperature board up.

The temperature board is now free from the main PCB.

Reassemble in reverse order with attention to the following details.

4.7.7 Attaching the temperature board when main PCB was not removed..

__ **Place** a spacer on each Phillips head screw.
__ **Insert** screw through board
__ **Place** another spacer on each screw
__ **Thread** screw into "l" bracket part way.
__ **Apply** Locktite 222 on the end of the screw and thread all the way into the bracket.

4.7.8 **Reconnect** the temperature connector to main PCB socket. **Reconnect** the temperature connector cable to the temperature PCB.

Reassemble in reverse order

4.7.9 Verification of repair.

__ When completely assembled, switch the unit to 'on' and perform a full functional check of the temperature function.

4.8 Specific Oxygen Board (NONIN SpO_2 PCB)

ABSTRACT:

4.8 Removing and replacing the ***Nonin SpO_2 PCB*** requires that you remove the battery, and remove the front housing.

4.8.1 Preparing the unit for disassembly.

__ **Turn** unit off and **disconnect** AC power cord from the unit.
__ **Disconnect** all accessories from the unit.
__ If the unit is pole mounted, remove unit from the pole.
__ If the unit is wall mounted, **remove** unit from the wall.
__ If the unit is free standing, **turn** the back towards you.

4.8.2 Battery cover removal.

__ **Remove** four (4) Phillips head screws from the battery door.
Use T112918 with the #4 Phillips bit.
__ **Remove** battery door.

4.8.3 Battery removal from battery compartment.

__ **Remove** the battery out of the compartment by turning the unit upside down and shaking until battery begins to slide out.
__ **Disconnect** the two (2) connectors.
__ (If the battery is to be discarded, **comply** with all environmental regulations pertaining to battery disposal.)

4.8.4 Opening front housing.

__ **Position** unit so the front panel is facing down.
__ **Remove** six (6) Phillips screws with T112918 and the #6 Phillips bit.
__ **Carefully separate** the front and rear housings.

4.8.5 Disconnection of connectors.

__ **Disconnect** the connector (red) from top of main board to relieve strain.
__ **Unplug** main 14-pin connector (red) from center of main PCB.
__ **Disconnect** pressure line from transducers.
__ **Disconnect** the printer flex circuit from the main board.
__ **Disconnect** 7-pin connector coming from the temperature connector PCB to the temperature PCB.
__ **Disconnect** the green wire 2-pin connector from the main board.
Note the orientation of the green wire. It is towards the center of the main PCB, or away from the temperature board.

The front housing is now free from the rear housing.

4.8.6 Removing the Nonin SpO_2 PCB.

__ **Turn** unit on its back and unscrew two torx screws from the board.
Use T112917 with the torx t8 bit.
__ **Disconnect** tube from bottom of valve.
__ **Disconnect** tube from pressure outlet fitting.
__ **Slide** board out of well.

4.8.7 Remove wires from board.

__ **Remove** rtv from the back side of seven wire solder connections shown below in figure 4.9.7

__ *Unsolder* wires from board as per figure 4.9.7 below.

__ **Remove** solder from wires to prepare for new board.

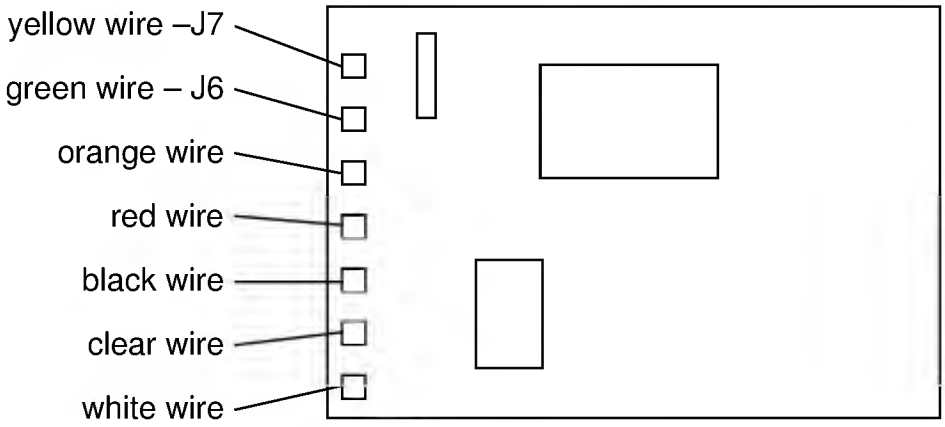

4.8.8 Checking wire connections by pin-out process.

__ Each wire will terminate at a specific pin position on the SpO_2 jack. Therefore, **reconfirm** that all connections are correct by pinning out your work. Use figure 4.9.8 to verify connections.

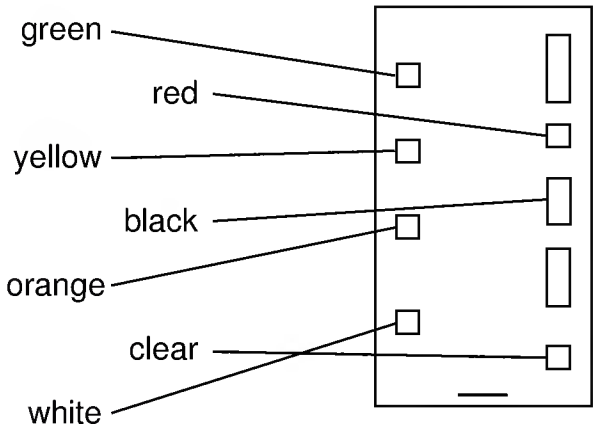

Figure 4.9.8 SpO_2 jack, wire side

4.8.9 Replacing the SpO_2 board.

__ **Connect** wires to locations as shown above.

__ **Cover** bottoms of connections with 376e108 (G.E. gray rtv #167, electronic adhesive sealant)

Reassemble in reverse order of disassembly.

4.8.10 Verification of repair.

___ When completely assembled, switch the unit to 'on' and perform a full functional check of the SpO_2 function.

4.9 Specific Oxygen Board (NELLCOR SpO_2 PCB)

ABSTRACT:

4.9 Removing and replacing the ***Nellcor SpO_2 PCB*** requires that you remove the battery, and remove the front housing.

4.9.1 Preparing the unit for disassembly.

__ **Turn** unit off and **disconnect** AC power cord from the unit.
__ **Disconnect** all accessories from the unit.
__ If the unit is pole-mounted, **remove** unit from the pole.
__ If the unit is wall-mounted, **remove** unit from the wall.
__ If the unit is free-standing, **turn** the back towards you.

4.9.2 Battery cover removal.

__ **Remove** four (4) Phillips head screws from the battery door.
Use T112918 with the #4 Phillips bit.
__ **Remove** battery door.

4.9.3 Battery removal from battery compartment.

__ **Remove** the battery out of the compartment by turning the unit upside down and shaking until battery begins to slide out.
__ **Disconnect** the two (2) connectors.
__ (If the battery is to be discarded, **comply** with all environmental regulations pertaining to battery disposal.)

4.9.4 Opening front housing.

__ **Position** unit so the front panel is facing down.
__ **Remove** six (6) Phillips screws with T112918 and the #6 Phillips bit.
__ **Carefully separate** the front and rear housings.

4.9.5 Disconnection of connectors.

__ **Disconnect** the connector from top of main board to relieve strain.
__ **Unplug** main 14-pin connector (red) from center of main PCB.
__ **Disconnect** pressure lines from transducers.
__ **Disconnect** 7-pin connector coming from the temperature connector PCB to the temperature PCB.
__ **Disconnect** the green wire 2-pin connector from the main board.
Note the orientation of the green wire. It is towards the center of the main PCB, or away from the temperature board.

The front housing is now free from the rear housing.

4.9.6 Removing the Nellcor SpO_2 PCB.

__ **Turn** unit on its back and unscrew two torx screws from the board and lift blue wire.
Use T112917 with the torx T8 bit.
__ **Disconnect** tube from bottom of valve.
__ **Disconnect** tube from pressure outlet fitting.
__ **Remove** two (2) screws from valve and lift valve.
Use T112917 with the torx T8 bit.
__ **Lift** Nellcor SpO_2 PCB from well.

4.9.7 Removing wires from board

__ **Unplug** the connector for the main PCB terminator by using a flat head screw driver and gently pry upwards on the connector.

__ **Unplug** the connector for the outside interface by simply pulling back on the connector.

The SpO_2 PCB has been removed from the rear housing.

4.9.8 Replacing the SpO_2 PCB

__ **Connect** the main PCB terminator cable connector to its proper port on the Nellcor SpO_2 PCB.

__ **Connect** the outside interface cable connector to its proper port on the Nellcor SpO_2 PCB.

Reassemble in reverse order of disassembly.

4.9.9 Verification of repair.

__ **When completely assembled, switch** the unit to 'on' and **perform** a full functional check of the SpO_2 function.

4.10 Pump/ Motor Assembly

ABSTRACT:

4.10 Removing and replacing the ***pump motor assembly*** requires the removal of the battery and the front housing. The replacement motor comes with an attached wire tie mounting pad.

4.10.1 Preparing the unit for disassembly.

__ **Turn** unit off and **disconnect** AC power cord from the unit.
__ **Disconnect** all accessories from the unit.
__ If the unit is pole mounted, remove unit from the pole.
__ If the unit is wall mounted, **remove** unit from the wall.
__ if the unit is free standing, **turn** the back towards you.

4.10.2 Battery cover removal.

__ **Remove** four (4) Phillips head screws from the battery door.
Use T112918 with the #4 Phillips bit.
__ **Remove** battery door.

4.10.3 Battery removal from battery compartment.

__ **Remove** the battery out of the compartment by turning the unit upside down and shaking until battery begins to slide out.
__ **Disconnect** the two (2) connectors.
__ (If the battery is to be discarded, **comply** with all environmental regulations pertaining to battery disposal.)

4.10.4 Opening front housing.

__ **Position** unit so the front panel is facing down.
__ **Remove** six (6) Phillips screws with T112918 and the #6 Phillips bit.
__ **Carefully separate** the front and rear housings.

4.10.5 Disconnection of connectors.

__ **Disconnect** the connector (red) from top of main board to relieve strain.
__ **Unplug** main 14-pin connector (red) from center of main PCB.
__ **Disconnect** pressure lines from transducers.
__ **Disconnect** the printer flex circuit from the main board.
__ **Disconnect** 7-pin connector coming from the temperature connector PCB to the temperature PCB.
__ **Disconnect** the green wire 2-pin connector from the main board.
note the orientation of the green wire. It is towards the center of the main PCB, or away from the temperature board.

The front housing is now free of the rear housing.

4.10.6 Removing the old pump/motor.

__ **Remove** the tubing from the motor. This can also be done after the motor is more accessible when it is out of the rear housing.
__ **Place** a flat blade screwdriver under the wire tie pad which holds motor in place.
__ Gently **remove** the motor from the rear housing.
__ **Unsolder** the orange and white wires from the motor terminals.
__ **Remove** any residue from the old pad with a flat blade screwdriver.

4.10.7 Installing a replacement pump/motor assembly.

__ **Clean** the pad mounting area with alcohol prior to soldering. This will allow time for the alcohol to evaporate.

__ **Solder** the orange wire to the plus (+) terminal of the motor.

__ **Solder** the white wire to the negative (-) terminal of the motor.

Be careful in this next step. Do not attach the pump/motor assembly to the rear housing until you are sure it is positioned properly. Keep in mind that the wires are intended to be on the left side of the pump/motor assembly, and that the motor end must not be resting against the back wall of the rear housing.

__ **Remove** the protective paper from the pad and place the pump motor assembly into the rear housing so that the end of the pump is even with the platform it sits on. This assures that the motor end will not be in contact with the back wall of the rear housing. Be careful to keep the wires away from the adhesive pad. Make sure that the other wires in the area are on the left side of the motor.

__ When everything is aligned, **attach** the pump/motor assembly to the rear housing by pressing the adhesive pad against the platform.

__ **Connect** the tube to the barb fitting of the pump.

Reassemble in reverse order of disassembly.

4.10.8 Verification of repair.

__ When completely assembled, switch the unit to 'on' and perform a full functional check and re-calibration.

The front housing is now free of the rear housing.

4.11 Valve (Pneutronics)

ABSTRACT:

4.11 Removing and replacing the ***Pneutronics valve*** requires the removal of the battery and the front housing. The replacement valve attaches with two torx fasteners. Two spade connectors make up the electrical connections. One tube connects to the valve.

4.11.1 Preparing the unit for disassembly.

__ **Turn** unit off and **disconnect** AC power cord from the unit.
__ **Disconnect** all accessories from the unit.
__ If the unit is pole mounted, remove unit from the pole.
__ If the unit is wall mounted, **remove** unit from the wall.
__ If the unit is free standing, **turn** the back towards you.

4.11.2 Battery cover removal.

__ **Remove** four (4) Phillips head screws from the battery door.
Use T112918 with the #4 Phillips bit.
__ **Remove** battery door.

4.11.3 Battery removal from battery compartment.

__ **Remove** the battery out of the compartment by turning the unit upside down and shaking until battery begins to slide out.
__ **Disconnect** the two (2) connectors.
__ (If the battery is to be discarded, **comply** with all environmental regulations pertaining to battery disposal.)

4.11.4 Opening front housing.

__ **Position** unit so the front panel is facing down.
__ **Remove** six (6) Phillips screws with T112918 and the #6 Phillips bit.
__ **Carefully separate** the front and rear housings.

4.11.5 Disconnection of connectors.

__ **Disconnect** the connector (red) from top of main board to relieve strain.
__ **Unplug** main 14-pin connector (red) from center of main PCB.
__ **Disconnect** pressure lines from transducers.
__ **Disconnect** the printer flex circuit from the main board.
__ **Disconnect** 7-pin connector coming from the temperature connector PCB to the temperature PCB.
__ **Disconnect** the green wire 2-pin connector from the main board.
Note the orientation of the green wire. It is towards the center of the main PCB, or away from the temperature board.

The front housing is now free of the rear housing

4.11.6 Removing the valve.

__ **Remove** the tubing from the valve.
__ **Unscrew** two torx fasteners. Use T112917 with the t8 torx bit.
__ Gently **remove** the valve from the rear housing.
__ **Disconnect** the two spade connectors from the valve.

4.11.7 Installing a replacement valve. See figure 4.12.7 below.

__ **Connect** the green wire spade connector to the left terminal.
__ **Connect** the dark brown wire spade connector to the right terminal.
__ **Replace** two torx fasteners using T112917 with torx t8 bit.
__ **Connect** the tube to the barb connector of the valve.

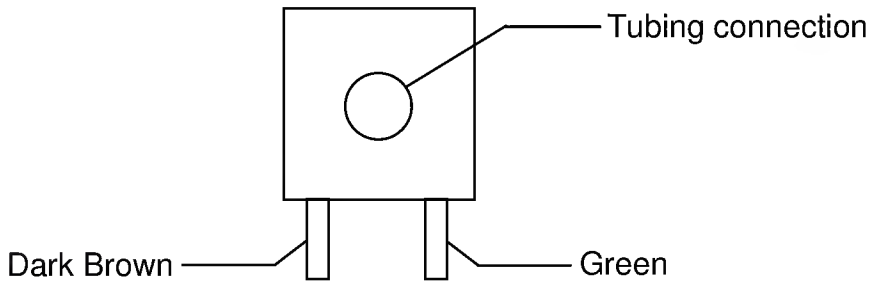

Figure 4.12.7 bottom view of valve (pneutronics)

Reassemble in reverse order with attention to the following details.

4.11.8 Placement of wires during reassembly.

__ **Make sure** the four pin wire harness is routed over and around the valve, and not underneath it.
__ **Make sure** that no wires are pinched underneath the valve.
__ **Make sure** that the dark brown and green wires are pushed down into the housing to eliminate any interference with the gears of the printer.

4.11.9 Verification of repair.

__ When completely assembled, switch the unit to 'on' and perform a full functional check and re-calibration.

4.12 Printer/Printer PCB/Keypad

ABSTRACT:

4.12 Removing and replacing the ***printer/PCB assembly*** requires the removal of the battery and the front housing. The ***keypad array*** can cleaned and or replaced easily ***without removing the front*** housing. The printer and the printer PCB are soldered together and are replaced as a unit.

4.12.1 Preparing the unit for disassembly.

__ **Turn** unit off and **disconnect** AC power cord from the unit.
__ **Disconnect** all accessories from the unit.
__ If the unit is pole mounted, remove unit from the pole.
__ If the unit is wall mounted, **remove** unit from the wall.
__ If the unit is free standing, **turn** the back towards you.

4.12.2 Battery cover removal.

__ **Remove** four (4) Phillips head screws from the battery door.
Use T112918 with the #4 Phillips bit.
__ **Remove** battery door.

4.12.3 Battery removal from battery compartment.

__ **Remove** the battery out of the compartment by turning the unit upside down and shaking until battery begins to slide out.
__ **Disconnect** the two (2) connectors.
__ (If the battery is to be discarded, **comply** with all environmental regulations pertaining to battery disposal.)

4.12.4 Opening front housing.

__ **Position** unit so the front panel is facing down.
__ **Remove** six (6) Phillips screws with T112918 and the #6 Phillips bit.
__ **Carefully separate** the front and rear housings.

4.12.5 Disconnection of connectors.

__ **Disconnect** the connector (red) from top of main board to relieve strain.
__ **Unplug** main 14-pin connector (red) from center of main PCB.
__ **Disconnect** pressure lines from transducers.
__ **Disconnect** the printer flex circuit from the main board.
__ **Disconnect** 7-pin connector coming from the temperature connector PCB to the temperature PCB.
__ **Disconnect** the green wire 2-pin connector from the main board.
Note the orientation of the green wire. It is towards the center of the main PCB, or away from the temperature board.

The front housing is now free of the rear housing.

4.12.6 Remove/clean keypad array.

__ **Remove** the paper cover.
__ **Remove** the paper roll
__ **Unscrew** two torx fasteners. Use T112917 with the t8 torx bit.
__ Gently **slide** the printer housing cover towards you and disengage the two screw tabs from the rear housing.
__ Very gently **roll** the printer housing cover up and away from you to gain access to the flex circuits underneath.
__ **Disconnect** the white flex circuit connector. (Note the orientation of the blue color on the connector end of the flex circuit. It is facing away from you in while you are disconnecting and reconnecting (later during reassembly).
__ Carefully **unscrew** the five (5) torx fasteners with insulators. Use T112917 with the torx t8 bit. Be careful not to tear the copper shield from its connecting wire.
__ **Lift up** the copper shield and remove the keypad array.

4.12.7 Removing the printer /PCB assembly.

__ **Insert** a flat blade screwdriver under the printer and pry loose the two doublesided foam tape fasteners.
__ **Slide** the printer out of the rear housing.
__ **Pass** the printed circuit board through the opening in the rear housing and completely remove the printer and printer PCB assembly.

Reassemble in reverse order with attention to the following details.

4.12.8 Placement of printer in rear housing.

__ When attaching the printer to the rear housing, **make sure** it is positioned all the way into the recess.

4.12.9 Attaching printer PCB to printer cover.

__ Carefully **place** the PCB into the cover so that the buttons protrude through the cover. Align the holes in the board with the standoffs on the cover and insert the five (5) screws with plastic insulators.

4.12.10 Verification of repair.

__ When completely assembled, **switch** the unit to 'on' and perform a full functional check of printer. Re-calibrate.

4.13 6 Volt Battery

ABSTRACT:

4.13 Removing and replacing the battery cover, battery. Occasionally it may be necessary to remove or replace the internal sealed lead battery (rechargeable battery) 5200-84. (6v,4ah/20hr)

CAUTION:
- Do not short circuit battery!
- Do not charge in a sealed container
- To avoid burn, if contact is made with electrolyte (acid) flush with water immediately!

WARNING:
- Insert battery only as shown.
- Failure to observe correct polarity could cause damage to unit.
- When it is necessary to replace the battery, use the approved no.5200-84 replacement battery only.
- Recycle used batteries.
- Make sure that replacement batteries are fully charged before returning unit to customer.

4.13.1 Preparing the unit for disassembly.

__ **Turn** unit off and **disconnect** AC power cord from the unit.
__ **Disconnect** all accessories from the unit.
__ If the unit is pole mounted, remove unit from the pole.
__ If the unit is wall mounted, **remove** unit from the wall.
__ If the unit is free standing, **turn** the back towards you.

4.13.2 Battery cover removal.

__ **Remove** four (4) Phillips head screws from the battery door. Use T112918 with the #4 Phillips bit.
__ **Remove** battery door.

4.13.3 Battery removal from battery compartment.

__ **Remove** the battery out of the compartment by turning the unit upside down and shaking until battery begins to slide out.
__ **Disconnect** the two (2) connectors.
__ (If the battery is to be discarded, **comply** with all environmental regulations pertaining to battery disposal.)

4.13.4 Battery installation (new or same battery).

__ **Position** battery near battery compartment so that the connector wires are within reach of the battery terminals.
__ **Attach** battery connectors to the battery as shown in diagram inside of battery compartment. (Connectors are polarized to prevent reverse polarity damage to the unit. **Do not cut or remove** positive battery connector from battery terminal.

4.13.5 Positioning battery strap.

__ **Position** the battery strap under the battery and **slide** the battery into the battery compartment as far as it will go.
__ **Fold** the end of the battery strap over the battery.

4.13.6 Replacing the battery door.

__ **Place** the battery door over the opening of the battery compartment so that the small ends of the keyhole slots are facing up.

__ **Attach** battery door with the four (4) Phillips screws.

4.13.7 Charging battery. (The unit may be used while new battery is charging.)

__ **Connect** AC power transformer to the monitor and allow the new battery to charge for approximately sixteen (16) hours.

SECTION 5:

Test Procedures

5.1 Calibration Test

ABSTRACT: The following is the test procedures for the WELCH ALLYN VITAL SIGNS MONITOR. We set this procedure up so that you can start at section 5.1 and go straight through the procedure or you can skip around. However, you must do all of the test called out in this section before a unit can be returned to field service.

NOTES:
A. The word "unit" in this text refers to the WELCH ALLYN VITAL SIGNS MONITOR.
B. ***Menu/Choice*** represents menu commands. Rather than use the phrase "choose the Exit command from the File menu."

1. **Connect** the WELCH ALLYN VITAL SIGNS MONITOR unit to the manual test station (see Section 2, Figure 2.2.1). Hook up the pressure lines to the coiled tubing of the monitor and the RS 232/Service
port connector to the computer. Start the computer program by double clicking on its program icon.

2. **Remove** the battery and hook unit up to the power supply and the digital voltage meter. Power supply should be set at 6.5Vdc.

3. **Turn on the unit** and in the program choose ***Unit/Information.*** Confirm that the information displayed on the screen matches that of the unit under test. Note : If the software returns an ERROR message, check the communications link, and re-send the command. If the communications return another error close the information dialog box then select ***Tools/Options*** and check that the correct communications port is selected. Place the unit into the "Detailed Test" mode by holding down the "start" and "cancel" buttons as power is applied.

4. **Observe** the unit. **Verify** that the software versions displayed on the LED displays meet the specifications called out in the Repair Test Specifications document.

5. **Press** the review button on the unit. The systolic window should read "CAL."

6. **Attach** a pneumatic clamp to the 100cc and the 250cc volume, remove the clamp from the 500cc volume.

7. ***Choose Test/Calibration.*** The dialog box will display the units primary and safety transducer manometer readings, unit battery reading, valve and pump status.

Note : Use Start button to close valve, and hand bulb to set the pressures.

8. **Verify** that the unit is within calibration specification at all the following target pressures: 0, 50, 150, and 250 mmHg. All target pressures have a tolerance of +/- 5 mmHg. Specification are found in the Repair Test Specifications document.

9. **Press** the "review" button until the systolic window reads "bat."

10. **Set** the power supply to 5.7 +.05,-0 Vdc (5.7 to 6.0 Vdc). Verify that the voltage reading of the unit meets specification called out in the Repair Test Specification document. Return the power supply to 6.0 ±0.25 Vdc upon completion of this test.

11 **Press** Close to exit from the "Test Calibration" dialog box.

5.2 Current Tests

1. **Connect** the WELCH ALLYN VITAL SIGNS MONITOR unit to the manual test station. Hook up the pressure lines to the coiled tubing of the monitor and the RS 232/Service port connector to the computer. Start the computer program by double clicking on its program icon.

2. Turn unit off unit then re-power unit allowing the unit to boot up into its normal mode.

3. Click on ***Test/Current Levels.*** Check the following current levels:
   a. Blank
   b. Idle
   c. Pump
   d. SpO_2
   e. Temperature

4. Verify these currents meet the specifications called out in the Repair Test Specification document.

5. Press Close button to exit dialog box.

5.3 Noise Levels

1. Connect the WELCH ALLYN VITAL SIGNS MONITOR unit to the manual test station. Hook up the pressure lines to the coiled tubing of the monitor and the RS 232/Service port connector to the computer. Start the computer program by double clicking on its program icon.

2. Click on ***Test/Noise Levels.***

3. Press Test button to retrieve the units internal pressure channel noise level. Verify that the noise level meets the specification called out in the Repair Test Specification document.

5.4 Button Test

1. Connect the WELCH ALLYN VITAL SIGNS MONITOR unit to the manual test station. Hook up the pressure lines to the coiled tubing of the monitor and the RS 232/Service port connector to the computer. Start the computer program by double clicking on its program icon.

2. Choose ***Test/Button Test.*** Press each button and ensure that the computer acknowledges it, via the "Button Pressed" display. Each button should also cause the units display to change to one of the settings noted below.

KEY	RESPONSE
Power	0
Start	1
Cancel	2
Review	3
Auto	4
Silence	5
Down	6
Up	7
Select Alarm	8
Volume	9
Feed	F
Print	P
Invalid response	E

F,P - When printer option is installed
E - Usually multiple keys pressed.

3. Press Close button to exit from dialog box.

5.5 Print Quality

1. Connect the WELCH ALLYN VITAL SIGNS MONITOR unit to the manual test station. Hook up the pressure lines to the coiled tubing of the monitor and the RS 232/Service port connector to the computer. Start the computer program by double clicking on its program icon.

2. Choose ***Test/Print Quality.*** Choose "test pattern 1." The printer will print out a pattern of large and small ASCII characters. Verify the quality of the printer output. Once test 1 is complete, choose "test pattern 2." The printer will print out a solid gray field. Verify the quality of the printer output.

Note : This option will only work when the printer option is installed.

5.6 Pneumatics Tests

1. Connect the WELCH ALLYN VITAL SIGNS MONITOR unit to the manual test station. Hook up the pressure lines to the coiled tubing of the monitor and the RS 232/Service port connector to the computer. Start the computer program by double clicking on its program icon.

2. Place unit into the "detailed test" mode. Do this by holding down the start and cancel buttons as the unit is powered up. Clamp off the 500cc and 250cc volumes, leaving the 100cc volume connected to the unit. Press the "review button" until "CAL" appears. Press the Start button to close the units valve. Using the hand bulb inflate the unit to the first test pressure, 250mmHg +/- 5mmHg (245 to 255 mmHg), and wait 15 seconds to stabilize.

3. Select ***Test/Pneumatic,*** and then the "Leak Test" option. Press the Test button to perform the first leak test. The test lasts 15 seconds. Once the test is complete the pressure change is displayed in the "Pressure" box. Verify that the leak rate meets the specification called out in the Repair Test Specification document.

   Press the Cancel button to open the unit valve and release the pressure.

   Note : The software will verify that the pressure is 250mmHg +/- 5mmHg, before it will begin a leak test.

4. Open the valve on the bulb and release pressure to the second test pressure, 50mmHg +/- 5mmHg (45 to 55 mmHg), and wait 15 seconds to stabilize.

   Press the Test button to perform the second leak test. The test lasts 15 seconds. Once the test is complete the pressure change is displayed in the "Pressure" box. Verify that the leak rate meets the specification called out in the Repair Test Specification document.

5. Press the Cancel button to open the unit valve and release the pressure.

   Note : The software will verify that the pressure is 50mmHg +/- 5mmHg, before it will begin a leak test.

6. Power down the unit and power the unit back up allowing it to boot up into its normal mode.

7. Remove the clamp from the 250cc volume and place it on the 100cc volume. Select the "Inflation Test" option, and press the Test button. The unit will perform an inflation test. The inflation time is displayed in the "Timer" box. Verify that the inflation time meets the specification called out in the Repair Test Specification document.

8. Remove the clamp from the 500cc volume and place it on the 250cc volume. Select the "Dump Test" option, and press the Test button. The unit will perform a dump test. The dump time is displayed in the "Timer" box. Verify that the dump time meets the specification called out in the Repair Test Specification document.

9. Disconnect the test equipment pneumatic hose from the unit. Connect the large cuff with coiled tubing to the unit's manifold. Wrap the large cuff around the 500cc volume, insuring that the white line, that runs along the end of the cuff, lines up with the "N" in the word "RANGE." Select the Deflation Test option, and press the "TEST" button. The unit will do a normal blood pressure cycle and then display the step pressures in the "Valve Step Array Data" box. Verify that the step array data meets the specifications called out in the Repair Test Specification document.

   Click on Close when all tests have been completed.

5.7 Hardware Fail-safe

1. Connect the WELCH ALLYN MONITOR unit to the manual test station. Hook up the pressure lines to the coiled tubing of the monitor and the RS 232/Service port connector to the computer. Start the computer program by double clicking on its program icon.

2. Place the unit into the "Detailed Test" mode. Do this by holding the "start" and "cancel" button as the unit is powered up. Press the review button until "CAL" appears in the systolic window.

3. Select the ***Test/Hardware Fail-safe*** menu item.

4. Select the "Over Pressure" test, remove the cuff from the unit and attach the test station's Pneumatic tubing to the unit. Press the Test button. Using the hand bulb, slowly increase the pressure, while observing the external pressure meter. The unit will return the hardware failsafe condition, E10. At this point, record the highest pressure observed on the external pressure meter. Verify that the over pressure value meets the specification called out in the Repair Test Specification document.

5. Press the Review button until 'LFE' appears in the systolic window.

6. Press the 'start' button and allow the VSM unit to test the over 15mmHg fail safe (test 1) and the repeat cycle test (test 2).

7. If no errors appear in the systolic window during the duration of the tests, and the unit goes into the "normal" life cycle tests, then the 15mmHg/repeat cycle tests are successful.

8. Press the cancel button to stop the 'life test.' Press review until the software version is seen on the display. Turn unit 'off' then back 'on' into the normal mode.

5.8 SpO_2 Tests

5.8.1 Nonin SpO_2

1. Connect the Nonin SpO_2 simulator to the unit with the test cable. The reading of the SpO_2 should be within the specified range indicated on the simulator.

2. Reconnect the SpO_2 sensor. Place the sensor onto your finger. The unit should return a reading if the sensor is OK.

5.8.2 Nellcor SpO_2

1. Connect the Nellcor SpO_2 simulator to the unit with the test cable. Make sure that the following settings* of the simulator are selected:

   Rate: 112
   Light: High 1
   Modulation: High
   RCAL Mode: RCAL63/Local

   Insure that the readings of the SpO_2 are within the specifications indicated on the simulator.

2. Reconnect the SpO_2 sensor. Place sensor onto your finger. The unit should return a reading if the sensor is OK.

*Note: On the Nellcor Simulator, if the settings are outside what is called out above, the alarms will activate on the monitor.

5.9 Temperature Tests

1. Disconnect the temperature probe from the unit leaving the probe itself in its housing. Place the “CAL key” into the connector. Remove the probe from the housing. The temperature should read the same as what is specified on the "cal" key. Remove the “cal” key and reconnect the probe. Place probe back into the housing.

2. Make sure that the unit’s temperature option is in the “monitor mode”. Do this by removing the probe from the housing and observing the temperature display. “Monitor mode” should be seen in the lower right hand side of the display. If this is not seen, wait approximately 60 seconds and the unit will change mode to the “monitor mode.”

3. Set up the Diatek 9600 calibrator. Set the calibrator to 96.4 F (35.8 C) or use a water bath between 84 F (28.8 C) and 106 F (41.1 C). Allow the calibrator to stabilize for three (3) minutes. Place the probe into the small hole in the calibrator. Observe the temperature display, The reading should be within the specified range, within 30 - 45 seconds.

4. Place the probe back into the housing. Set the calibrator to 106 F (41.1 C). Allow the calibrator to stabilize for three minutes. Remove the probe from the housing, the unit must be in the monitor mode, if not wait until the unit is in that mode. Place probe into the small hole at the top of the calibrator. The reading should be within the specified range, within 60 seconds. If using a water bath skip this part of the test.

5.10 Nurse Call Testing

1. Power the unit 'on.'
2. Using a Ohm meter, place the probes onto pin 7 and pin 8 of the RS232 connector.
3. Ensure that the Ohm meter reads infinite resistance (open circuit).
4. Create an alarm condition E11 by pinching off the pneumatic tube approximately 1 inch from the pneumatic port and pressing the start button.
5. Observe the Ohm meter, the meter should read 0.0 Ohms (short circuit).
6. Press the cancel button to stop the alarm.
7. Observe the Ohm meter again. The meter should again read infinite resistance (open circuit).

VSM Failure Tracking Sheet

Failure

Basic Info:

Date/Time:	
Observed by:	
Catalog Number:	
S/N:	
Unit SW Ver.:	
Life Cycle Count:	
Repair # (cust. returns)	

Location

- ☐ ATE, Config
- ☐ ATE, Final
- ☐ ATE, Ship

ATE SW Rev: _____

ATE Test #: _____

- ☐ Burn-In
- ☐ Assembly
- ☐ Customer
- ☐ Sales/Marketing
- ☐ QA
- ☐ Other

Test Failed / Reason for Return

- ☐ Error Code: _____
- ☐ LEDs
- ☐ Buttons
- ☐ Alarm
- ☐ Won't Power Up/Down
- ☐ BP, Won't Calibrate
- ☐ BP, Readings Too High
- ☐ BP, Other Problem
- ☐ Temp Problem
- ☐ SpO2 Problem
- ☐ Printer Problem
- ☐ Other. . .

Description:

Repair

Basic Info:

Date/Time:	
Repaired by:	

	Y	N
Was the problem repeatable?	☐	☐
Was a component replaced?	☐	☐
Was there an assembly error?	☐	☐
Was a procedure not followed?	☐	☐
Was there a test equipment problem?	☐	☐
Was there a design problem?	☐	☐

Primarily, the Following Component (if any) Was Involved in the Failure:

- ☐ Main Board
- ☐ Display Board
- ☐ Sp02 Board
- ☐ Temp Board
- ☐ Temp Connector Board
- ☐ Printer Board
- ☐ Main Cable
- ☐ Serial Cable
- ☐ Sp02 to Main Cable
- ☐ Sp02 to Sensor Cable
- ☐ Display Cable
- ☐ Printer Cable
- ☐ Charger Cable
- ☐ Valve
- ☐ Pump
- ☐ Printer
- ☐ Buttons
- ☐ Check Valve
- ☐ Battery
- ☐ Pneumatic Assembly
- ☐ Speaker
- ☐ Temp Probe
- ☐ SpO2 Sensor
- ☐ Other Component
- ☐ Not Applicable
- ☐ Temp Cable
- ☐ Transformer
- ☐ Pressure Switch

Description:

fm2004X.doc VSM Repair Form
Issue date: 5/18/99

Test Information:		**Acceptable Ranges**
Unit software version	_____	(>5.0)
Temperature s/w ver. (If available)	_____	(>21)
SpO_2 software version (if available)		(Nonin:>7; Nellcor:>1.2.0.0)
Test pressure @ 0 mmHg	_____	(-0.3 to 0.3mmHg)
Primary pressure @ 0 mmHg	_____	(-0.75 to 0.75mmHg)
Safety pressure @ 0 mmHg	_____	(±1mmHg)
Test pressure @ 50 mmHg	_____	(45 to 55mmHg)
Primary pressure @ 50 mmHg	_____	(±1.5mmHg)
Safety pressure @ 50 mmHg	_____	(±1.5mmHg)
Test pressure @ 150 mmHg	_____	(145 to 155mmHg)
Primary pressure @ 150 mmHg	_____	(±1.5mmHg)
Safety pressure @ 150 mmHg	_____	(±4.5mmHg)
Test pressure @ 250 mmHg	_____	(245 to 255mmHg)
Primary pressure @ 250 mmHg	_____	(±1.5mmHg)
Safety pressure @ 250 mmHg	_____	(±7.5mmHg)
Testvoltage 5.5 Vdc	_____	(5.5 to 6.0 Vdc)
Unit voltage 5.5 Vdc	_____	(±0.05Vdc)
Blank mode current	_____	(≤80mA)
Idle mode current	_____	(≤800mA)
Pump current	_____	(≤600mA)
SpO_2 current (if available)	☐ Nonin _____ ☐ Nellcor _____	(Nonin:≤80mA; Nellcor:≤120mA)
Temperature current (if available)	_____	(≤15mA)
Noise level	_____	(≤0.05mmHg)
Button test	_____	(Pass/Fail)
Print quality (if available)	_____	(Pass/Fail)
Unit leak @ 250 mmHg(245/255 mmHg)	_____	(≤5mmHg)
Unit leak @ 50 mmHg (45/55 mmHg)	_____	(≤5mmHg)
Inflation Time	_____	(≤7 seconds)
Dump time	_____	(≤10 seconds)
Deflation Test	_____	(Pass/Fail)
Over pressure value	_____	(296 to 329mmHg)
Over 15mm Hg	_____	(Pass/Fail)
Under 15mm Hg	_____	(Pass/Fail)
SpO_2 sim. reading (if available)		(Nonin:98%,80BPM; Nellcor:81%,112BPM)
SpO_2 sensor reading (if available)		(Pass/Fail)
Temp. “Cal-key” read (if available)	_____	(97.3±0.2˚F, 36.3±0.1˚C)
Temp. calibrator read (if available)	_____	(96.1˚F to 96.7˚F) (35.6˚C to 36.0˚C)
Temp. calibrator read (if available)	_____	(105.7˚F to 106.3˚F) (40.9˚C to 41.3˚C)

For test data specifications consult the Repair Test Specification Document.

SECTION 6:

A) Drawings
B) Schematics
C) Board Layouts
D) Bill of Materials

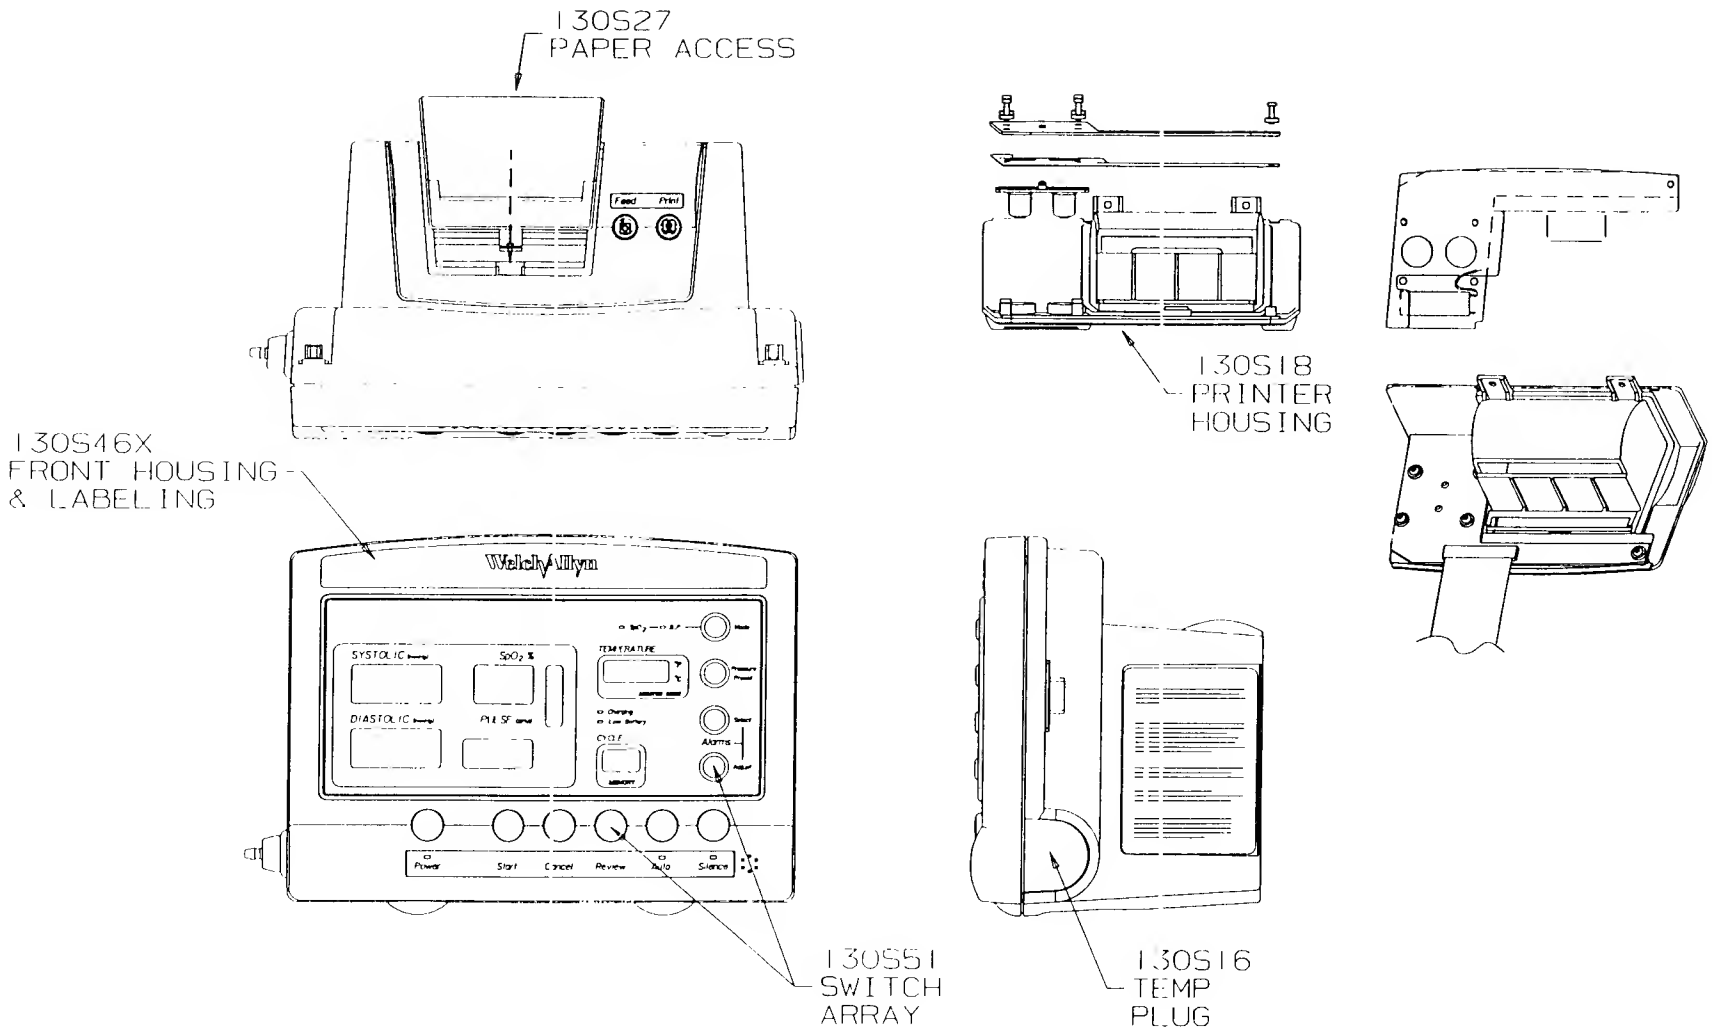
130S27
PAPER ACCESS
Feed
Print
130S18
PRINTER
HOUSING
130S46X
FRONT HOUSING
& LABELING
Welch Allyn
SYSTOLIC
DIASTOLIC
TEMPERATURE
Power
Start
Cancel
Review
Silence
130S51
SWITCH
ARRAY
130S16
TEMP
PLUG

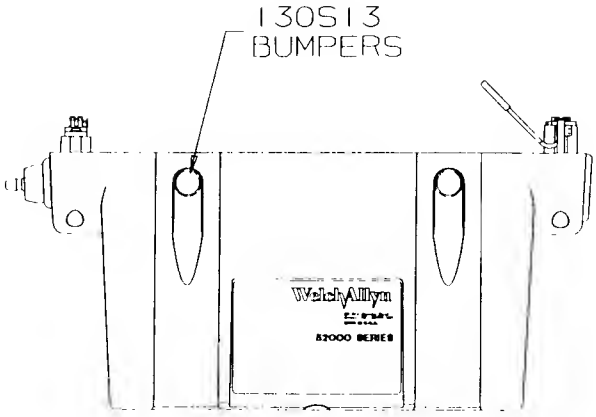
130S13
BUMPERS
Welch Allyn
52000 SERIES

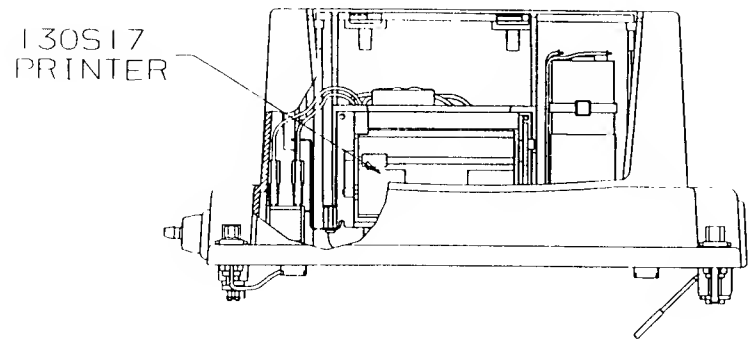
130S17
PRINTER

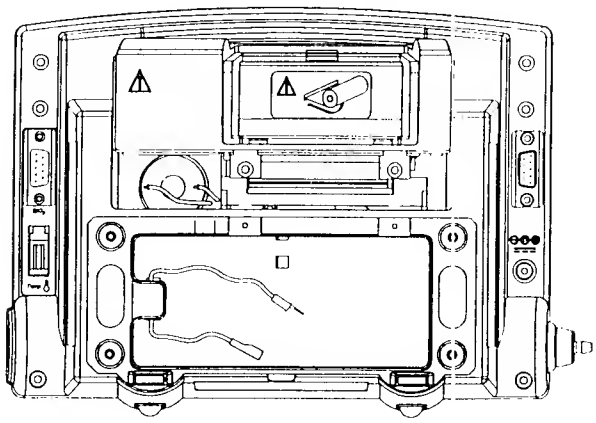

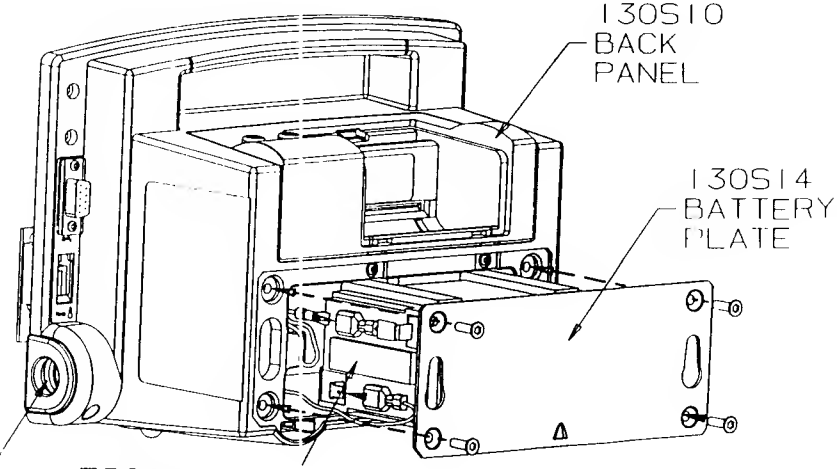
130S10
BACK
PANEL
130S14
BATTERY
PLATE
130S24
TEMP
PROBE
HOUSING
5200-84
BATTERY
ASSEMBLY

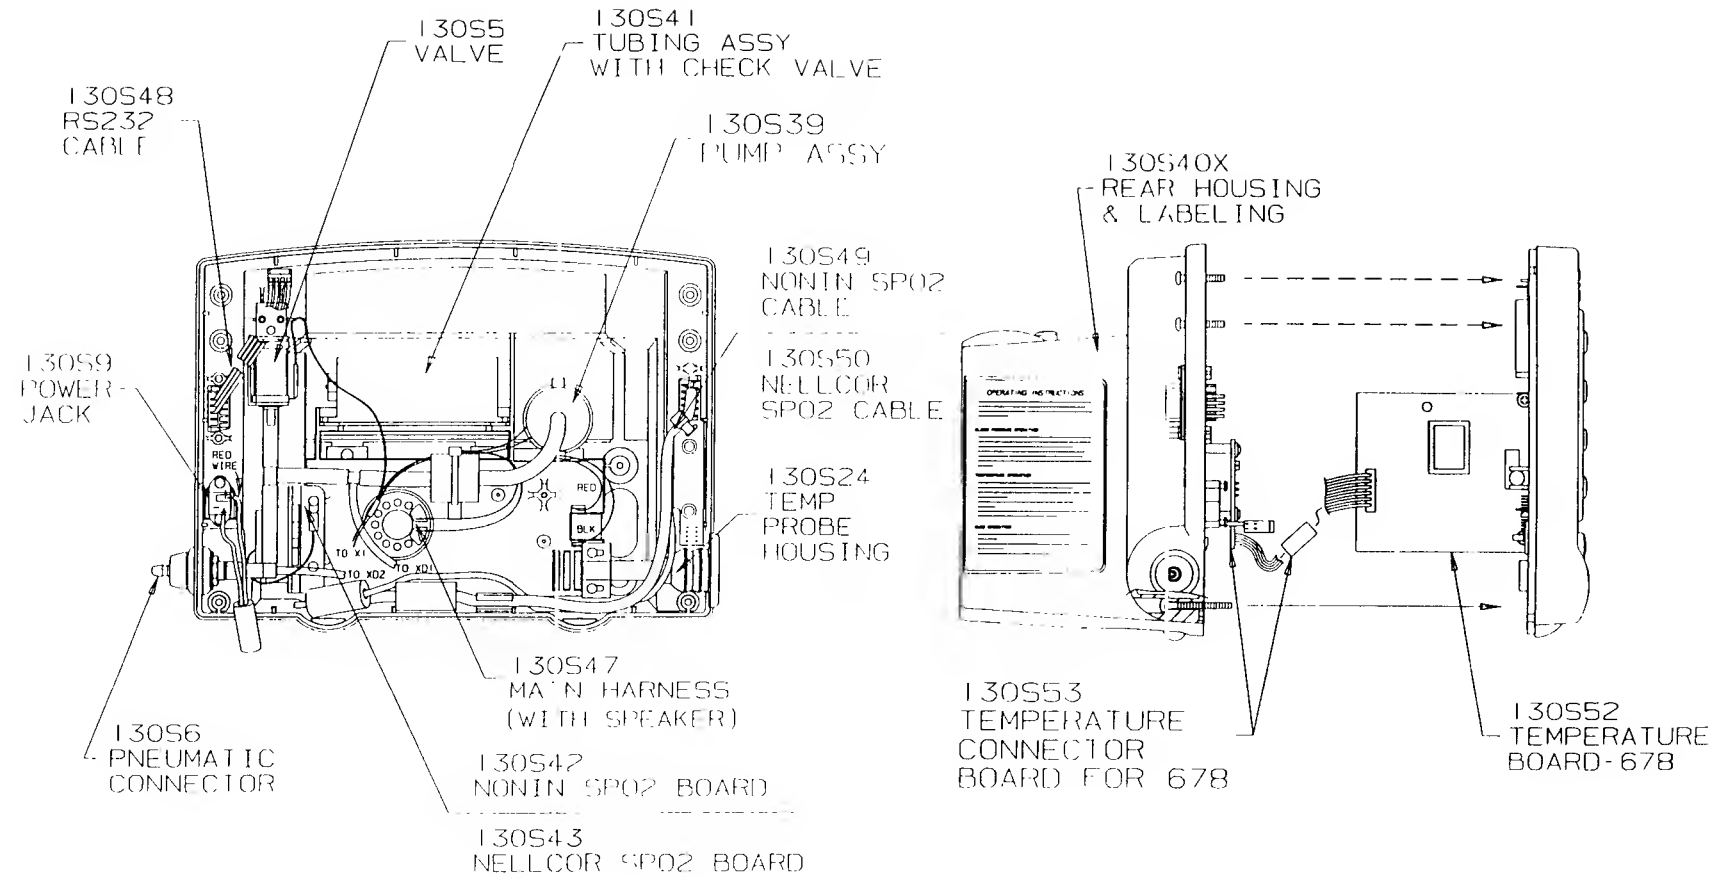
130S5
VALVE
130S41
TUBING ASSY
WITH CHECK VALVE
130S48
RS232
CABLE
130S39
PUMP ASSY
130S40X
REAR HOUSING
& LABELING
130S49
NONIN SPO2
CABLE
130S59
POWER
JACK
130S50
NELLCOR
SPO2 CABLE
130S24
TEMP
PROBE
HOUSING
130S47
MAIN HARNESS
(WITH SPEAKER)
130S6
PNEUMATIC
CONNECTOR
130S42
NONIN SPO2 BOARD
130S43
NELLCOR SPO2 BOARD
130S53
TEMPERATURE
CONNECTOR
BOARD FOR 678
130S52
TEMPERATURE
BOARD-678

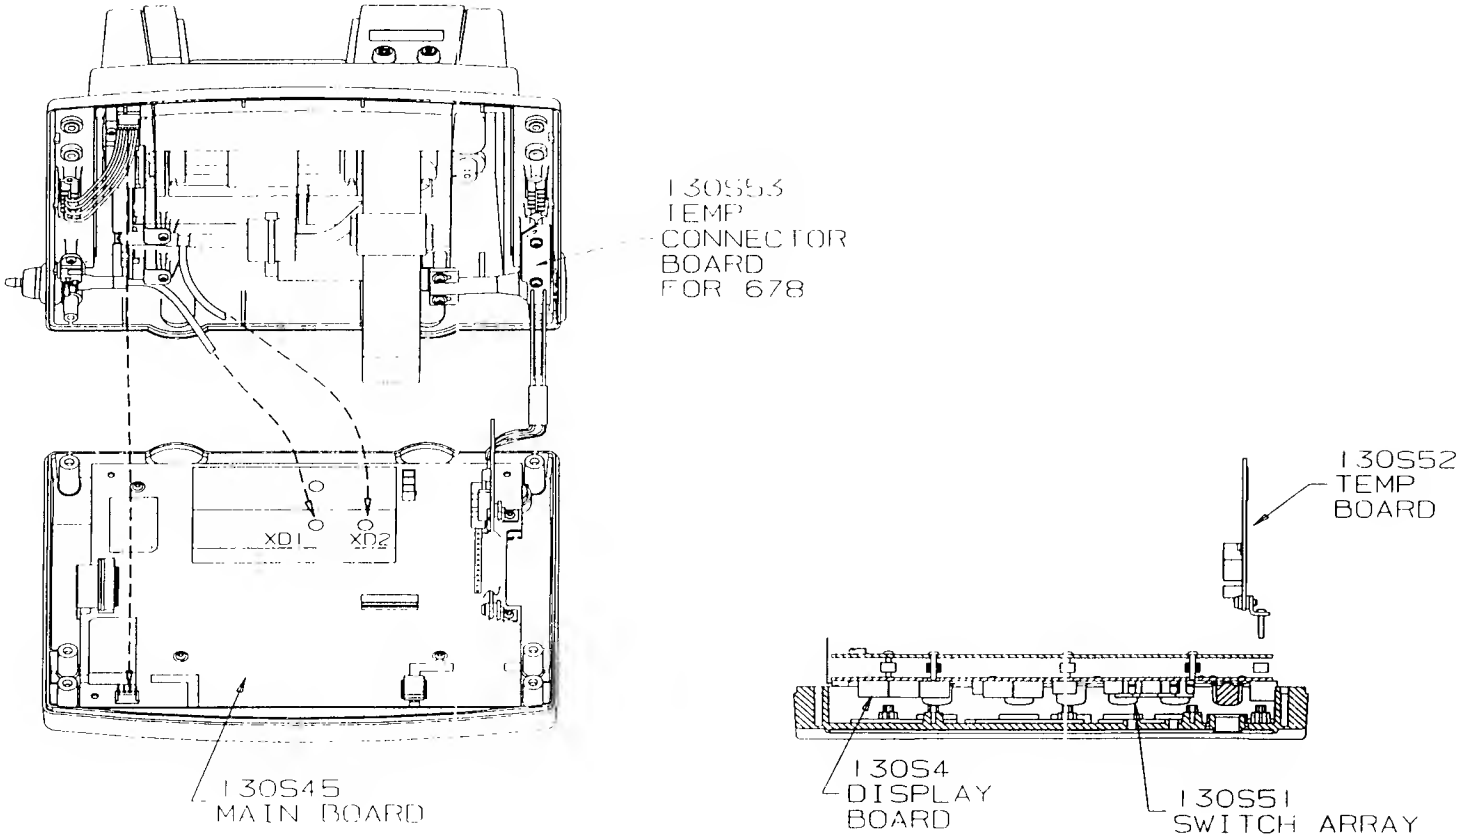
130S53
TEMP
CONNECTOR
BOARD
FOR 678
XD1
XD2
130S45
MAIN BOARD
130S52
TEMP
BOARD
130S4
DISPLAY
BOARD
130S51
SWITCH ARRAY

This manual contains reference drawings of the SpO_2 PCBs. Due to the proprietary nature of the SpO_2 PCBs of Nonin and Nellcor, the schematics, board layouts and bills of material could not be placed into this service manual. Please contact Nonin or Nellcor directly for this information.

Thanks!

109P378

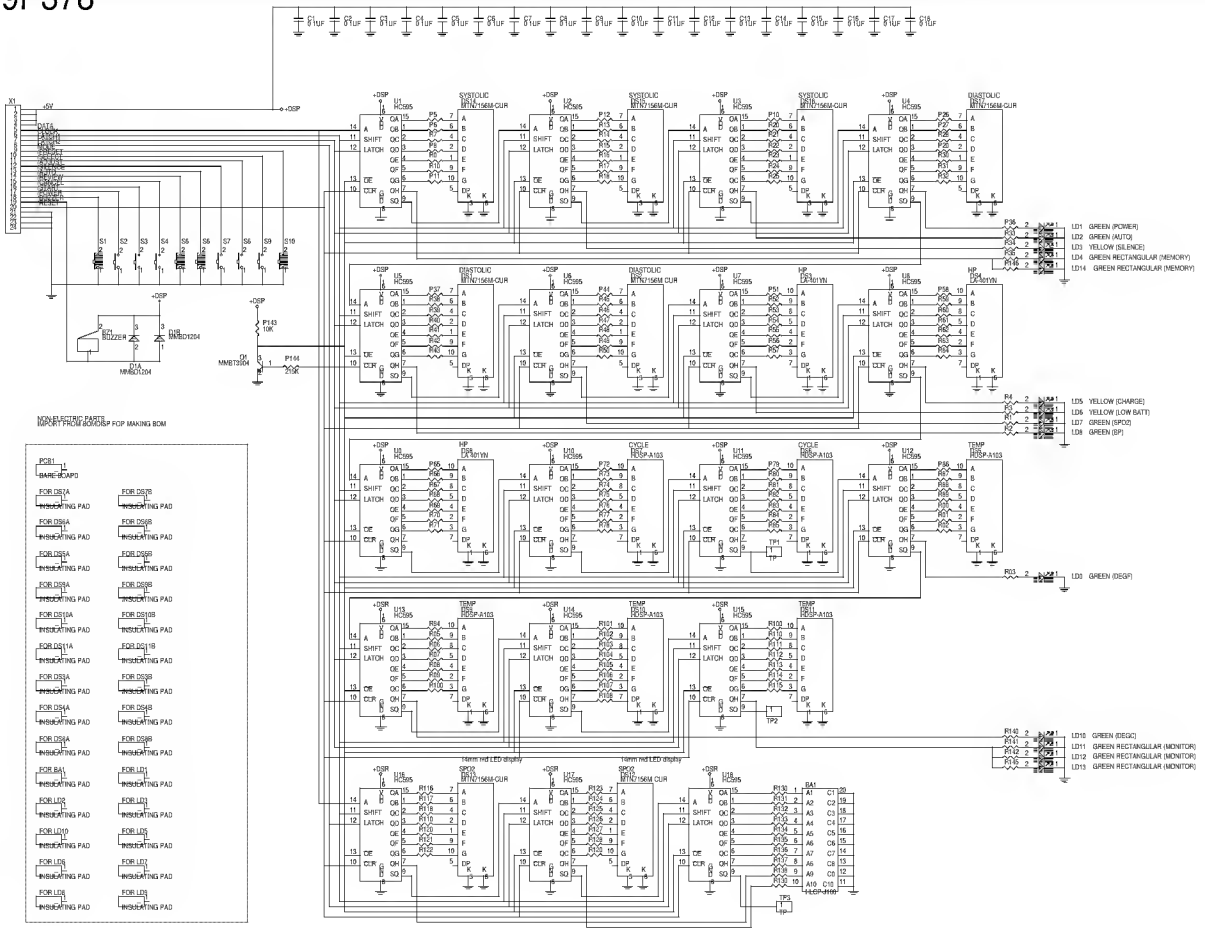
NON ELECTRIC PARTS
IMPORT FROM BOM/DSP FOP MAKING BOM
PCB1
BARE BOARD
FOR DS1A
INSULATING PAD
FOR DS1B
FOR DS2A
FOR DS2B
FOR DS3A
FOR DS3B
FOR DS10A
FOR DS10B
FOR DS11A
FOR DS11B
FOR DS4A
FOR DS4B
FOR DS5A
FOR DS5B
FOR BA1
FOR LD1
FOR LD2
FOR LD9
FOR LD5
FOR LD6
FOR LD7
FOR LD8
FOR LD4
FOR LD3
SYSTOLIC
DIASTOLIC
HP
CYCLE
TEMP
10mm Red LED display
LD1 GREEN (POWER)
LD2 GREEN (AUTO)
LD3 YELLOW (SILENCE)
LD4 GREEN RECTANGULAR (MEMORY)
LD14 GREEN RECTANGULAR (MEMORY)
LD5 YELLOW (CHARGE)
LD6 YELLOW (LOW BATT)
LD7 GREEN (SPO2)
LD8 GREEN (BP)
LD9 GREEN (DEGF)
LD10 GREEN (DEGC)
LD11 GREEN RECTANGULAR (MONITOR)
LD12 GREEN RECTANGULAR (MONITOR)
LD13 GREEN RECTANGULAR (MONITOR)
REVISIONS
1 AMT40863-10 INTRODUCE
2 AMT40863-15 CHANGE BA1 BACK TO STAR MICRONICS TMS-05
3 AMT40863-20
CHANGE U2,3 FROM ELM9-280 TO ELM2-285
CHANGE U5,6,7 FROM ELM2-135 TO ELM4-135
4 AMT40863-25
CHANGE U4,8 FROM ELM4-135 TO ELM2-110
WELCH ALLYN / TYCOS INSTRUMENTS
SCHEMATIC, DISPLAY BOARD, CVSM
SIZE D
DRAWING NUMBER 109P378 AMT40863-40
REV 4
DATE June 4, 1996
SHEET of 1

CVSM DISPLAY BOARD
125S208A AMT40863-49
Bill Of Materials

Revised: June 4, 1996
Schematic Revision: 4

ITEM	QTY	REFERENCE	CONFIG	VALUE/DESCRIPTION	MFG/MFG #	ALTERNATES	DECAL
1	1	BA1	A	HLCP-J100 10-bargraph	HP HLCP-J100		CM059
2	1	BZ1	A	BUZZER	STAR MICRONICS TMB-05		CM063
3	18	C1,C2,C3,C4,C5,C6,C7,C8, C9,C10,C11,C12,C13,C14, C15,C16,C17,C18	A	0.1UF Ceramic Z5U	T&B/VITRAMON VJ0805U104MXAMT		SMD805
4	8	DS1,DS2,DS12,DS13,DS14, DS15,DS16,DS17	A	MTN7156M-CUR 14mm red LED display	MARKTECH MTN7156M-CUR		CM003
5	3	DS3,DS4,DS8	A	LA-401YN 10mm yellow LED display	ROHM LA-401YN		CM002
6	6	DS5,DS6,DS7,DS9,DS10, DS11	A	HDSP-A103 7mm red LED display	HP HDSP-A103		CM021
7	1	D1	A	MMBD1204 Dual diode	NATIONAL MMBD1204		WAC_SOT-23_3
8	1	FOR BA1	A	INSULATING PAD	BIVAR 816-080		
9	6	FOR DS3B,FOR DS3A, FOR DS4B,FOR DS4A, FOR DS8B,FOR DS8A	A	INSULATING PAD	BIVAR 366-300		
10	12	FOR DS5B,FOR DS5A, FOR DS6B,FOR DS6A, FOR DS7B,FOR DS7A, FOR DS9B,FOR DS9A, FOR DS10B,FOR DS10A, FOR DS11B,FOR DS11A	A	INSULATING PAD	BIVAR 388-075		
11	3	FOR LD1,FOR LD2,FOR LD3	A	INSULATING PAD	BIVAR ELM2-265		
12	6	FOR LD5,FOR LD6,FOR LD7, FOR LD8,FOR LD9,FOR LD10	A	INSULATING PAD	BIVAR ELM2-110		
13	1	LD1	A	GREEN (POWER)	ROHM SLR-37MC3F		CM060
14	1	LD2	A	GREEN (AUTO)	ROHM SLR-37MC3F		CM060
15	1	LD3	A	YELLOW (SILENCE)	ROHM SLR-37YC3F		CM132
16	2	LD4,LD14	A	GREEN RECTANGULAR (MEMORY)	HP HLMP-0504		CM204
17	1	LD5	A	YELLOW (CHARGE)	ROHM SLR-37YC3F		CM132
18	1	LD6	A	YELLOW (LOW BATT)	ROHM SLR-37YC3F		CM132
19	1	LD7	A	GREEN (SPO2) SPO2 OPTION	ROHM SLR-37MC3F		CM060
20	1	LD8	A	GREEN (BP) SPO2 OPTION	ROHM SLR-37MC3F		CM060
21	1	LD9	A	GREEN (DEGF) SPO2 OPTION	ROHM SLR-37MC3F		CM060
22	1	LD10	A	GREEN (DEGC) TEMP. OPTION	ROHM SLR-37MC3F		CM060
23	2	LD11,LD12	A	GREEN RECTANGULAR (MONITOR) TEMP. OPTION	HP HLMP-0504		CM204
24	1	LD13	-	GREEN RECTANGULAR (MONITOR) TEMP. OPTION	HP HLMP-0504		CM204
26	1	Q1	A	MMBT3904 NPN	MOTOROLA MMBT3904LT1		WAC_SOT-23_3

109P379

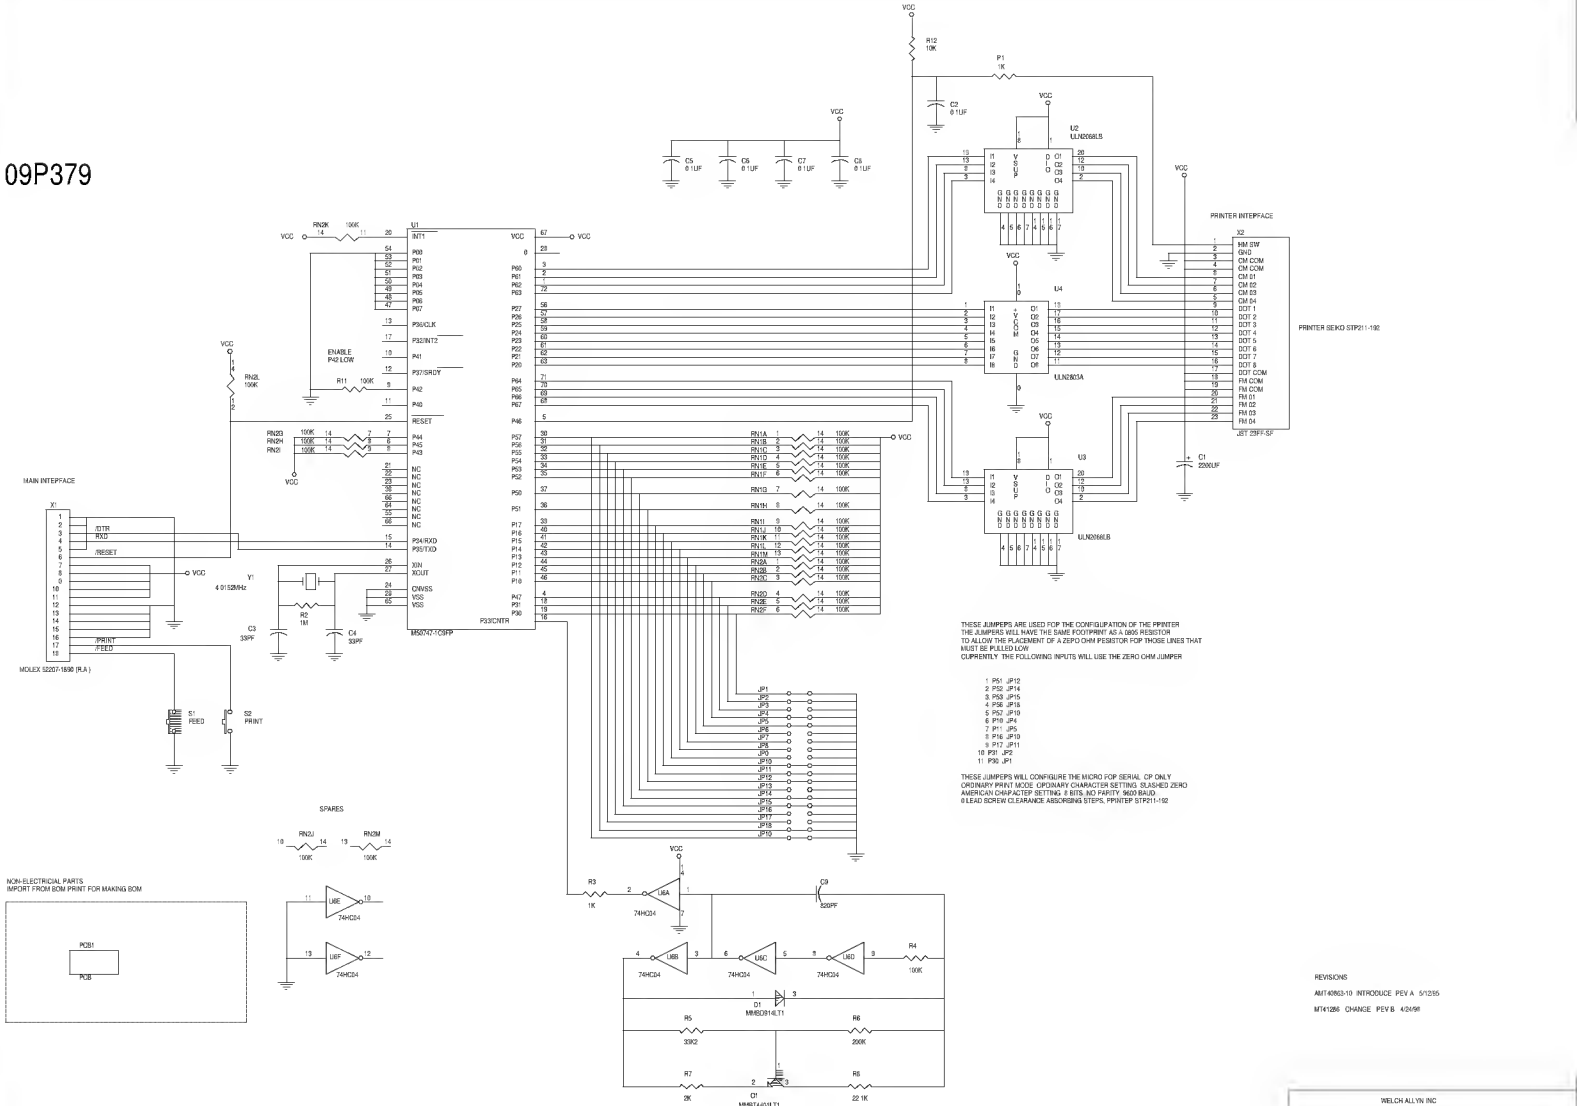

REVISIONS

AM140863-10 INTRODUCE PEV A 5/12/95

MT141286 CHANGE PEV B 4/24/98

WELCH ALLYN INC		
Title: SCHEMATIC, VSM PRINTEP BOARD		
Size: C	Document Number: 109P379	REV: B
Date: April 29 1998	Sheet 1 of 1	

VSM PRINTER BOARD
125S209A Bill Of Materials **MT41286**

Schematic Revised: April 24, 1998
Drawing Revision: B

ITEM	QTY	REFERENCE	CONFIG	VALUE/DESCRIPTION	MFG/MFG #	ALTERNATES	DECAL
1	1	C1	A	2200UF Electrolytic	Panasonic EEU-FA1A222		CM159
2	5	C2,C5,C6, C7,C8	A	0.1UF Ceramic Z5U	T&B/VITRAMON VJ0805U104MXAMT		SMD805
3	2	C3,C4	A	33PF Ceramic NP0	AVX/KYOCERA 08055A330KATMA		SMD805
4	1	C9	A	820PF Ceramic X7R	AVX/KYOCERA 08051C821KATMA		SMD805
5	1	D1	A	MMBD914LT1 Diode	MOTOROLA MMBD914LT1		WAC_SOT-23_3
6	11	JP1,JP2,JP4, JP5,JP10,JP11 JP12,JP14,JP15 JP18,JP19	A	JUMP1	JUMP805		SMD805
7	8	JP3,JP6,JP7, JP8,JP9,JP13, JP16,JP17	-	JUMP0	NOT-A-PART		SMD805
9	1	Q1	A	MMBT4401LT1 NPN	MOTOROLA MMBT4401LT1		WAC_SOT-23_3
10	2	RN2,RN1	A	100K	CTS 766-141104GTR07		SO14
11	2	R3,R1	A	1K 1/10W 1%	KOA RK73H2AT1001F		SMD805
12	1	R2	A	1M 1/10W 1%	KOA RK73H2AT1004F		SMD805
13	2	R4,R11	A	100K 1/10W 1%	KOA RK73H2AT1003F		SMD805
14	1	R5	A	33K2 1/10W 1%	KOA RK73H2AT3322F		SMD805
15	1	R6	A	200K 1/10W 1%	KOA RK73H2AT2003F		SMD805
16	1	R7	A	2K 1/10W 1%	KOA RK73H2AT2001F		SMD805
17	1	R8	A	22.1K 1/10W 1%	KOA RK73H2AT2212		SMD805
18	1	R12	A	10K 1/10W 1%	KOA RK73H2AT1002F		SMD805
19	1	S1	-	FEED	NOT-A-PART		SW-CONTACT
20	1	S2	-	PRINT	NOT-A-PART		SW-CONTACT
21	1	U1	A	M50747-1C9FP Microcontroller	SEIKO/MITSUBISHI M50747-1C9FP		QFP-72
22	2	U3,U2	A	ULN2068LB Quad driver	ALLEGRO ULN2068LB		SO20W
23	1	U4	A	ULN2803A Octal driver	ALLEGRO ULN2803A	MOTOROLA ULN2803A	DIP18
24	1	U6	A	74HC04 Hex inverter	HARRIS CD74HC04M		SO14
25	1	X1	A	MOLEX 52207-1890 (R.A.) Header-18	MOLEX 52207-1890		CM098
26	1	X2	A	JST 23FF-SF Header-23	JST 23FF-SF		CM095
27	1	Y1	A	4.9152MHz Crystal	ECS ECS-49-20-4		XTAL200

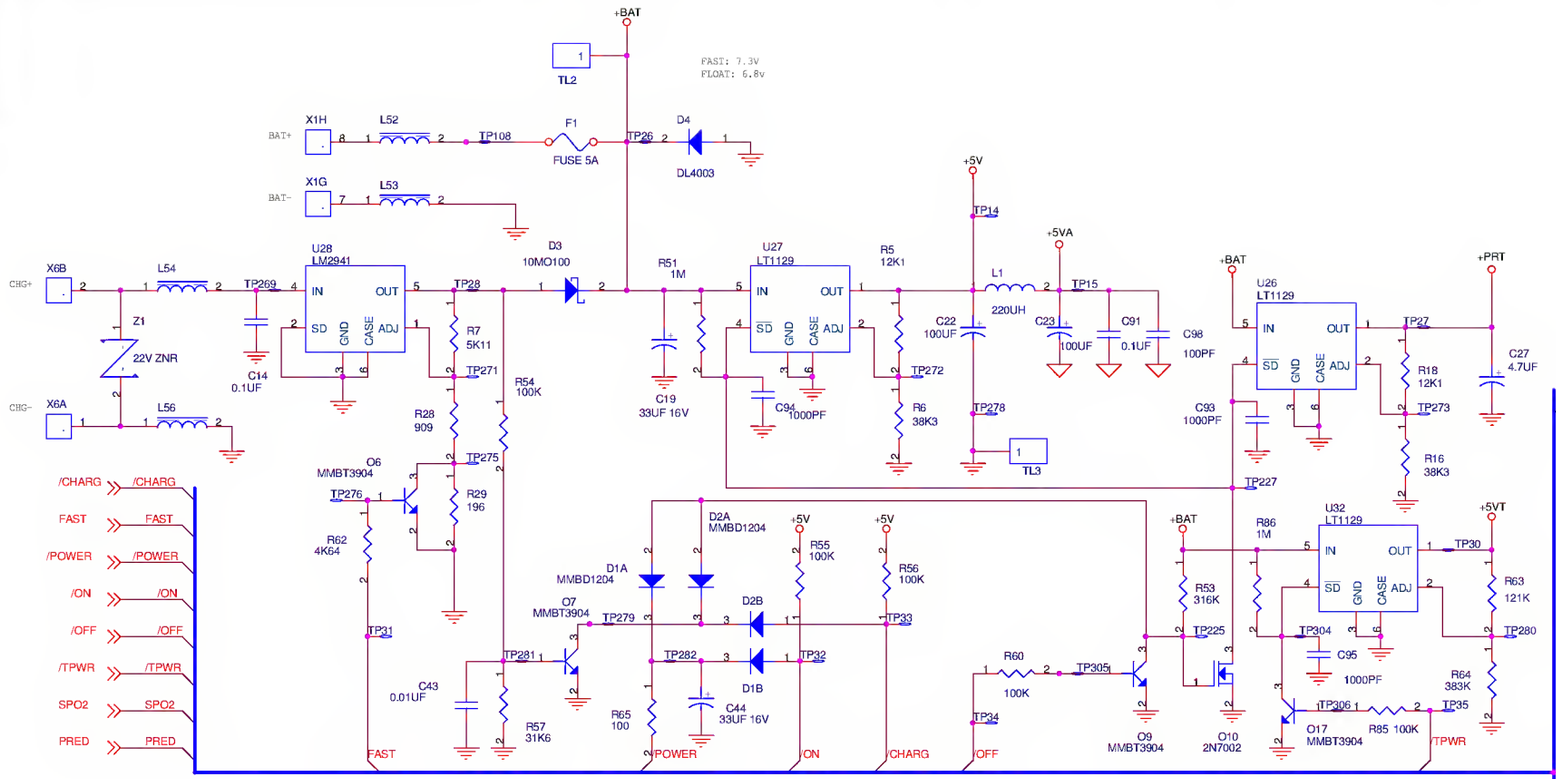

Rev	ECO	Description of Change
F	MT41467	R99 C hange from 10K to 14K (XD2 Amp)
E	MT41434	BOM Update (RX1)
D	MT41415	Signal Swap (FAST & /TPWR)
C	MT41405	BOM U pdate (ESD improvements)
B	AMT41357-9	BOM Update (R156)
A	AMT41357-4	Introduction

DRAWN	T WHITAKER	DATE
APPROVED	B PIERCE	DATE
REL TO PROD	J HOWARD	DATE
	T EDMONDSON	DATE

WELCH ALLYN INC

Title: SCHEMATIC, VSM MAIN BOARD

Size: C | Document Number: 109P387 MT41434 | Rev: F

Date: Friday, November 10, 2000 | Sheet 1 of 2

Sheet 2 of 2 is D size

CPU

DIGITAL I/O

CLOCK GENERATOR

POWER CONTROL SIGNALS

SPEAKER DRIVE

SPO2 I/F

THERMOMETER

THERMOMETER I/F

INTERBOARD CONNECTOR

UART

FREQUENCY COUNTER

SpO2 PULSE TONE

tone frequency gen.

volume

REAL TIME CLOCK

TEMP. PROBE BOARD GROUND

TEMP PROBE DETECT

TX1

PRINTER I/F

REDUNDANCY PRESSURE TRANSDUCER / AMPLIFIER

TEMP SENSOR

BAT SENSE

>150M DETECT

>350MM DETECT

PRIMARY PRESSURE TRANSDUCER / AMPLIFIER

ANALOG MUX

V/F CONVERTER

FREQUENCY COUNTER

RS232/423

WELCH ALLYN INC		
Title	SCHEMATIC, VSM MAIN BOARD	
Size: D	Document Number: 109P387	MT41454 Rev: F
Date: Friday, November 10, 2000	Sheet 2 of 2	

CVSM DISPLAY BOARD
125S208A AMT40863-49
Bill Of Materials

Revised: June 4, 1996
Schematic Revision: 4

27	80	R1,R2,R3,R4,R5,R6,R7,R8, R9,R10,R11,R12,R13,R14, R15,R16,R17,R18,R19,R20, R21,R22,R23,R24,R25,R26, R27,R28,R29,R30,R31,R32, R33,R34,R35,R36,R37,R38, R39,R40,R41,R42,R43,R44, R45,R46,R47,R48,R49,R50, R93,R116,R117,R118,R119, R120,R121,R122,R123,R124, R125,R126,R127,R128,R129, R130,R131,R132,R133,R134, R135,R136,R137,R138,R139, R140,R141,R142,R145,R146	A	681 1/10W 1%	KOA RK73H2AT6810F	SMD805
28	21	R51,R52,R53,R54,R55,R56, R57,R58,R59,R60,R61,R62, R63,R64,R65,R66,R67,R68, R69,R70,R71	A	316 SMD805	KOA RK73H2AT3160F	SMD805
29	43	R72,R73,R74,R75,R76,R77, R78,R79,R80,R81,R82,R83, R84,R85,R86,R87,R88,R89, R90,R91,R92,R94,R95,R96, R97,R98,R99,R100,R101, R102,R103,R104,R105,R106, R107,R108,R109,R110,R111, R112,R113,R114,R115	A	1K21 1/10W 1%	KOA RK73H2AT1211F	SMD805
30	1	R143	A	10K 1/10W 1%	KOA RK73H2AT1002F	SMD805
31	1	R144	A	215K 1/10W 1%	KOA RK73H2AT2153F	SMD805
32	10	S1,S2,S3,S4,S5,S6,S7,S8, S9,S10	-	SWPB	NOT-A-PART	SW-CONTACT
33	3	TP1,TP2,TP3	-	TP	NOT-A-PART	TP40
34	18	U1,U2,U3,U4,U5,U6,U7,U8, U9,U10,U11,U12,U13,U14, U15,U16,U17,U18	A	HC595 8-bit shift reg w/ hold reg	MOTOROLA MC74HC595AD	SO16
35	1	X1	A	HEADER24 Header	MOLEX 52207-2490	CM141

SECTION 7:

Repair Test Specifications

Released Document Date: _____
Design Engineer: _____
Mfg. Engineer: _____
Eng. Manger: _____
Quality Engineer: _____

Repair Test Specifications

2nd Generation Vital Signs Monitor

Original Date: 13 May, 1999

Current Revision Date: 25 May, 1999

Current Revision Number: 1.00

File: 126P181.DOC

Copyright 1999 Welch Allyn Inc.
All rights reserved
This information is considered proprietary and confidential.

Note 1: The word "Unit" throughout this document refers to the second generation VSM unit with out pneumatics (tubing and cuff), temperature probe, SpO2 probe, and main battery attached, unless other wise noted.

Note 2: All test are performed in the "Detailed Test Mode" or in the "Normal Mode" unless other wise noted.

Note 3: Standard test voltage unless otherwise stated is 6.0 (+/- 0.25) Vdc.

Note 4: All test are performed utilizing the Repair Software for the second generation VSM.

Note 5: Unless otherwise stated, all calibrated volumes will be +/- 10cc of the stated volume.

Note 6: Unit software for the second generation VSM will be equal to or greater than "5.0" If the unit has Nonin SpO2, the Nonin SpO2 software will be equal to or greater than "7." If the unit has Nellcor SpO2, the Nellcor SpO2 will be equal to or greater than "1.2.0.0." If the unit has temperature, the temperature software will be equal to or greater than "21."

REPAIR TESTS

Leak Tests

1. Unit must not leak more than 5 mmHg in a 15 second interval while attached to a 100cc calibrated volume and pressurized to between 245 and 255 mmHg.

2. Unit must not leak more than 5 mmHg in a 15 second interval while attached to a 100cc calibrated volume and pressurized to between 45 and 55 mmHg.

Inflation Test

3. Unit must be able to inflate a 250.0cc (+ 50.0cc/- 0cc) calibrated volume from less than 5.0 mmHg to greater than 210.0 mmHg in 7.0 seconds or less.

Dump Test

4. Unit must be able to deflate a 500.0cc (+ 100.0cc/- 0cc) calibrated volume from greater than 260.0 mmHg to less than 15.0 mmHg in 10 seconds or less.

Unit Manometer Calibration

Note: Internal temperature of the unit must be less than 32 degrees Celsius before performing calibration. Prior to calibration the zero and gain pot must be set to 128. Prior to calibration the three pressure correction values must be set to 16384. Prior to calibration the safety zero offset value must be set to 0 and the safety gain must be set to 10000.

5. The zero pot will be adjusted to produce a minimum error (+/- 1 count) when 0 +/-1 mmHg is applied. The count written to the pot must be between 5 and 250. The unit must successfully perform a autozero after this zero pot adjustment. The unit gain will then be calibrated for minimum error value (+/- 1 mmHg) when a pressure between 195 mmHg and 205 mmHg is applied. The unit's first pressure correction value will then be adjusted at a pressure between 90 and 100 mmHg to within +/-1 mmHg of the applied pressure. The unit's second pressure correction value will then be adjusted at a pressure between 190 mmHg and 200 mmHg to within +/-1 mmHg of the applied pressure. The unit's third pressure correction value will then be adjusted at a pressure between 280 mmHg and 290 mmHg to within +/-1 mmHg of the applied pressure. The Pressure Correction Values written to the unit must be 16384 +/-1000. Calibration information stored in the unit to include above constants, calibration date and time (local standard date and time), and a four character calibrator's identification signature (the calibrator's three initials and a "*". The "*" will be automatically placed into the signature by the VSM repair software).

6. The optimum safety zero offset will be adjusted to measure less than +/-1 mmHg when 0.0 mmHg is applied to the unit. The optimum safety gain value will be adjusted to measure +/-8.0 mmHg when 285 +/-10 is applied to the unit. The final safety zero offset must be between +/-31767. The final safety gain value must be between +1000 and +31767.

Manometer Accuracy Test

7. Internal temperature of the unit must be less than 32.0 degrees Celsius before performing test.
    a) The primary transducer must be within +/- 0.75 mmHg at 0 +/-0.3 mmHg. The safety transducer must be within +/- 1 mmHg at 0 +/-0.3 mmHg.
    b) The primary transducer must be within +/- 1.5 mmHg at 50 +/-5.0 mmHg. The safety transducer must be within +/- 1.5 mmHg at 50 +/- 5.0 mmHg.

c) The primary transducer must be within +/- 1.5 mmHg at 150 +/- 5.0 mmHg. The safety transducer must be within +/- 4.5 mmHg at 150 +/- 5.0 mmHg.
d) The primary transducer must be within +/- 1.5 mmHg at 250 +/-5.0 mmHg. The safety transducer must be within +/- 7.5 mmHg at 250 +/- 5.0 mmHg.

Deflation Test

8. With the unit connected to a large adult cuff and a target inflation pressure of 200 mmHg, have the unit perform a complete "normal" BP cycle. Steps 0 and 1 are dummy steps = 0.0 mmHg and are ignored. For steps two and three, the size of the step must be between 3.0 mmHg and 11.0 mmHg. Step 4 and all other steps above or equal to 40 mmHg, step size must be between 7.0 mmHg and 11.0 mmHg. All steps below 40 mmHg, except for the last step, will be between 4.5 mmHg and 10 mmHg. The last step will be between 0.01 mmHg and 10 mmHg.

Voltage and Current Testing

9. The unit battery voltage reading must be calibrated to within +/- 0.05 Vdc at a nominal calibrated battery voltage input of 5.7 Vdc +/- 0.5 Vdc. Calibration should include a verification test at this specified test point. A four character calibration signature will be written to unit upon satisfactory calibration completion (the calibrator's three initials and a "*". The "*" will be automatically placed into the signature by the VSM II repair software).

Note: The current levels called out below will be 40 mA higher in units that are configured with Acuity communication hardware and software.

10. Unit "Blank" mode current must less than or equal to 80.0 mA. "Blank" mode current is determined when all LED segments are off, SpO2 mode is off, and the Temperature board is asleep.

11. Unit "Idle" mode current must be less than or equal to 800 mA. "Idle" mode current is determined when all LED segments are on, SpO2 mode is off and the Temperature board is asleep.

12. Unit "Pump" mode current must be less than or equal to 600 mA. "Pump" mode current is determined by unit into "Blank" mode, actuating the valve on, operating the pump on, recording the current.

Noise Test

13. Internal electrical noise of the unit's pressure channel, determined by using serial 1 second noise sample command, must be less than or equal to 0.05 mmHg.

Hardware Fail-safe Tests

14. "Over pressure test": Units hardware must detect over pressure on unit pneumatic system between 296.0 mmHg and 329.0 mmHg.

Note: *Over 15 mmHg and under 15 mmHg tests are disabled in the VSM2 Monitor.*

15. "Over 15 mmHg test": Unit hardware must detect if the pneumatic system has been pressurized greater than 15 mmHg for more than 155 second but less than 180 seconds.

16. "Under 15 mmHg test": Unit hardware must detect if the pneumatic system has been pressurized less than 15 mmHg for more than 25.0 seconds but less than 35.0 seconds before allowing new inflation cycle in "non-STAT" AUTO mode.

SpO2 Option Testing (Nonin)

17. Note: setting for this test are specific to the "Nonin Patient Simulator" model 8000S. Accuracy of the SpO2 board after 25 second stabilization period must be within +/- 2% O2 and +/- 2 BPM. Values are 98% O2 and 80 BPM.

18. Unit "SpO2" mode current must be less than or equal to 80.0 mA. "SpO2" mode current is determined by turning off all the LEDs, putting the Temperature board asleep, actuating the SpO2 and waiting 25 second for stabilization, recording current then subtracting "Blank" mode current from the test current.

SpO2 Option Testing (Nellcor)

19. Note: settings for this test are specific to the "Nellcor Patient Simulator" model SRC2. Accuracy of the Nellcor SpO2 board are 25 second stabilization period must be within +/- 2% O2 and +/- 2 BPM. Values are 81% O2 and 112 BPM.

20. Unit "SpO2" mode current must be less than or equal to 120 mA. "SpO2" mode current is determined by turning off all LEDs, putting the Temperature board asleep, Actuating the SpO2 and waiting 25 seconds for stabilization, recording current the subtracting "Blank" mode current from the test current.

Temperature Option Testing

21. The accuracy of the Temperature board must be within +/- 0.2 degree F for readings with a nominal temperature of 97.3 degrees F (36.3 degrees C) (Using the CAL Key).

22. The unit must be able to read a temperature of 96.4 degrees F (35.8 degrees C) and a temperature of 106 degrees F (41.1 degrees C) within +/- 0.3 degrees F (+/- 0.2 degrees C) using the Welch Allyn San Diego 9600 Calibrator to obtain temperatures.

Note: if using a water bath to take temperature reading, the temperature of the bath should be between 84 and 106 degrees F (28.8 and 41.1 degrees C) and the reading must be within +/- 1.0 degrees F (0.8 degrees C) measure against a temperature standard that is accurate to +/- 1 degree F (0.8 degrees C).

23. Unit "Temperature" mode current must be less than or equal to 15.0 mA. "Temperature" mode current is determined by turning off all LEDs, turning SpO2 mode off, actuating the Temperature board, waiting 5 seconds, recording current then subtracting "Blank" mode current from test current.

Printer Option Testing

24. The printer must be able to print out test pattern 1 and test pattern 2 (small and large ASCII characters (test 1) gray solid field (test 2)). The technician will subjectively determine if the print quality is sufficient.

RS232 Testing

25. The RS232 communication operation will be confirmed with successful serial transmit and receive.

RS423 Testing (Acuity Monitors)

26. The RS423 communication operation will be confirmed with successful serial transmit and receive at 19.2 K Baud.

History of Revisions and Effective Dates

Version	Date	Author	Description
1.0d1	5/13/99	JDB	Initial specification introduction.
1.0d2	5/24/99	JDB	Added specification for the secondary transducer. Changed the deflation specification to comply with current production. Added back into spec. the over 15 mmHg specification and the under 15 mmHg specification. Added in the specification of the RS423 testing. Removed the valve current test specification.
1.0d3	5/24/99	JDB	Added specification for the accuracy of the primary and safety transducer.
1.0d4	5/25/99	JDB	Corrections completed in the calibration section and voltage/current section. Changes also made for readability.
1.00	5/25/99	JDB	Introduction of the Test Specification.